





# Multiband HF Center-Loaded Off-Center-Fed Dipoles

Serge Stroobandt, ON4AA

Copyright 2007–2021, licensed under [Creative Commons BY-NC-SA](https://creativecommons.org/licenses/by-nc-sa/4.0/)

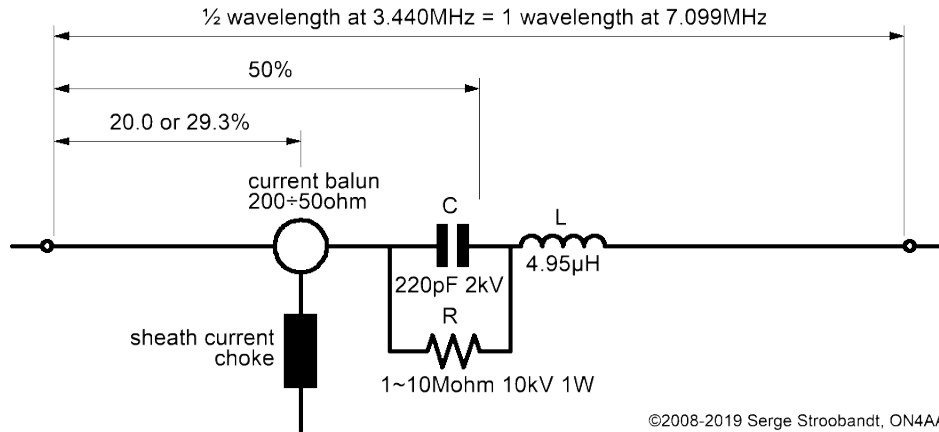

**Figure 1:** ON4AA's CL-OCFD with 80, 40, 30, 20, 15 & 10 m coverage. The capacitor C shortens the dipole for 80 m (actually 75 m) band resonance, whereas the coil lengthens the dipole for 30 m third harmonic resonance. Resistor R has as sole function bleeding off static charges, protecting capacitor C.

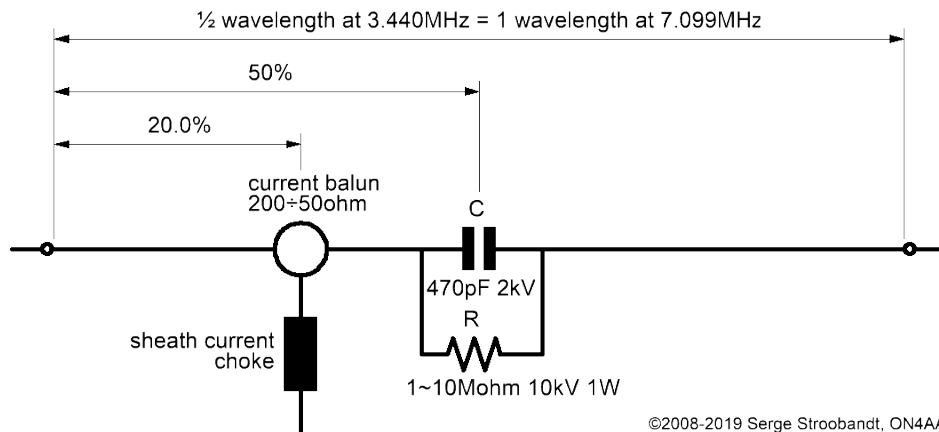

**Figure 2:** ON4AA's 80, 40, 20, 15, 12 & 10m CL-OCFD. The capacitor C renders the dipole resonant on the 80 (actually 75) meter band, while resistor R has as sole function bleeding off static charges, hence protecting capacitor C. There is no third harmonic resonance on 30 m. However, in return, seventh harmonic resonance is present on 12 m.

Having any questions about the CL-OCFD antenna?  
Wanting to discuss OCFDs and single-wire-fed Windom antennas?

Post your questions, results and pictures to:

the **OCFD**  **Groups.io**

## Design goals



output tank of a PA

Like many fellow radio amateurs, I own a fairly standard shortwave radio station consisting of a 100 W HF transceiver driving a 1 kW tube power amplifier. I never chose to spend any money on a kW-rated antenna-tuner. Anyhow, I can tune out VSWRs as high as  $3\div 1$  with the adjustable pi-network of the output filter tank inside my power amplifier.

Thus I set out to design an HF antenna with a VSWR of  $3\div 1$ , or less, over the full bandwidth of as many amateur radio HF bands as possible. At the same time, my preference went out to the low- and the non-WARC bands. This design exercise resulted in a new kind of antenna which I dubbed Center-Loaded Off-Center-Fed Dipole Antenna, or CL-OCFD for short.

The Center-Loaded Off-Center-Fed Dipole (CL-OCFD) was **invented and first described by yours truly, Serge Y. Stroobandt, ON4AA, in the year 2006**. I briefly considered patenting my design. However, I chose not to do so as a way to give back to this wonderful hobby community, which indirectly has given me a lot. If you like or use the CL-OCFD, please, consider **making a donation** towards keeping this site on-line.

**Companies or individuals selling** any CL-OCFD antenna variant are granted the explicit permission to do so, but are kindly solicited to **refer the inventor by name and call sign** in any manual and marketing material.

# Performance



on target

In proof of its performance, an EZNEC-calculated VSWR-graph of the CL-OCFD antenna is presented in Figure 2. This antenna works without a tuner over the entire bandwidth of the 80, 40, 30, 20, 15 and 10 m-band, simply by adjusting the output-tank of your tube power amplifier. —If your final output stage is a transistor amplifier, you definitely will need an antenna-tuner though.— In such, this antenna is the first described single-wire antenna to be offering

these capabilities.

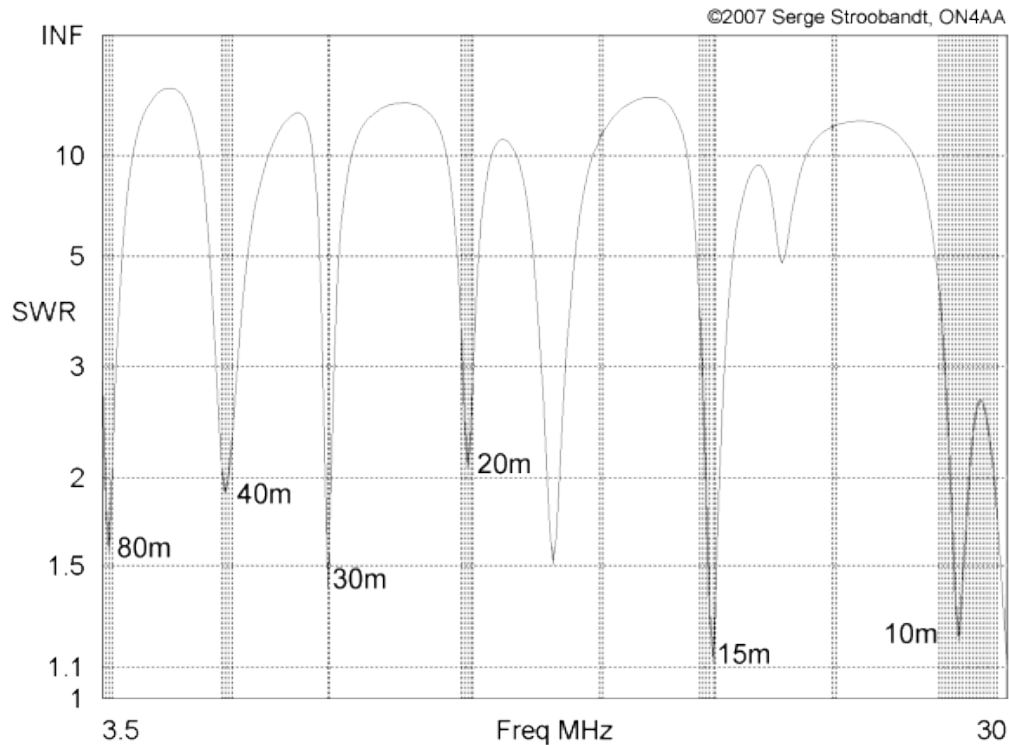


Figure 3: VSWR of the 80, 40, 30, 20, 15 & 10m CL-OCFD as a function of frequency

## Why off-center-fed?

When offsetting the feed position of a dipole antenna away from its center, at some point, similar feed impedances can be obtained for a number of frequency bands. This occurs at the fundamental ( $\lambda/2$  dipole) resonant frequency as well as a number of harmonic resonant frequencies.

This is possible because a standing wave is present along the dipole which causes the feed impedance to change. In the span of a quarter wavelength, it varies from a very high value at the antenna ends (several  $k\Omega$ ) to the value of the radiation resistance at the corresponding frequency.

At its fundamental resonant frequency, in free space and for an infinitesimal thin wire, the dipole's theoretical center feed impedance would be  $73 \Omega$ . However, the optimal multiband feed point will have a higher impedance than this theoretical center feed impedance. Hence, a good quality impedance-transforming balun will be necessary to match the optimal balanced feed impedance to that of the unbalanced coaxial feed cable.

## Full 80 m-band coverage



Operating a center-fed dipole over the entire 80 m-band turns out to be particularly challenging. With 8.2% relative bandwidth the 80 m-band (3.5–3.8 MHz) is exceptionally broad. Cumbersome cage dipoles or load switching arrangements deliver only partially satisfactory results.


**full 80 m-band coverage** However, any OCF dipole easily outperforms aforementioned obtrusive antenna arrangements.<sup>1,2</sup> Here is why:

Placing the feed point away from the center, increases the resistive part of the feed impedance and source load more than the reactive (imaginary) part of the resonant antenna, which is nearly resonant. This effectively lowers the loaded Q-factor of the antenna at the feed point. Offsetting the feed position of a dipole antenna, will result in a lower loaded Q-factor and hence a broader working bandwidth at the fundamental frequency.

$$Q_{\text{loaded}} \downarrow \equiv \frac{X_{\text{in}}}{R_{\text{in}} \uparrow + R_{\text{source}} \uparrow} \quad \text{and} \quad Q_{\text{loaded}} = \frac{f_{\text{res}}}{BW} \Rightarrow BW \uparrow = \frac{f_{\text{res}}}{Q_{\text{loaded}} \downarrow} \quad (1)$$

In summary, offset feeding causes the antenna to be loaded differently. The effect is most pronounced at the fundamental frequency. This is a first reason why it pays off to build your OCF dipole with 80 m as the fundamental wavelength and not, for example, 160 m. An additional reason will be given in the section about center-loading.

Please note that a year after the publication of this article, Eugene G. Preston, K5GP, described a **dualband 160 & 80 m CL-OCFD** exhibiting comparable broadband behaviour on 80 meter.<sup>3</sup> However, this 80 m broadband performance is achieved in a slightly different manner. The antenna is actually a 3-band CL-OCFD antenna (160, 80 & 75 m) where the center loading moves the natural third harmonic to the lower end of the 80 m band, below the 75 m second harmonic.

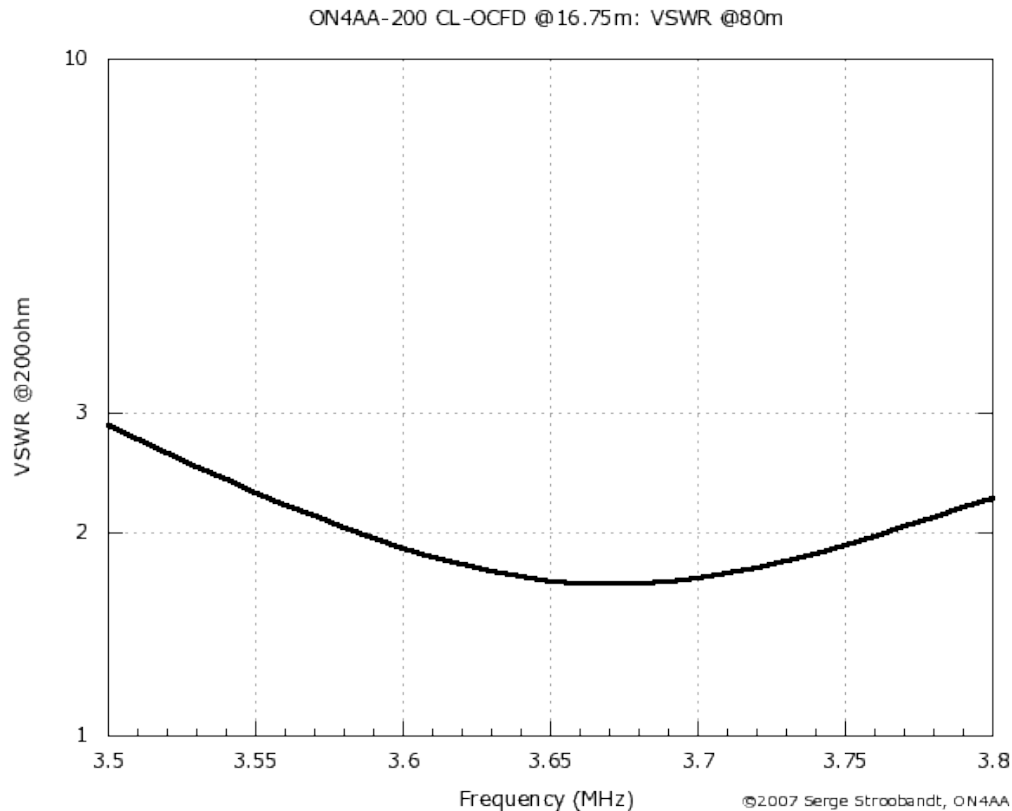

**Figure 4:** VSWR of the six-band CL-OCFD on 80 m and at a height of 16.75 m (55 ft)

## Literature



### continuous renewal

Rather than reinventing the wheel, every antenna project should start with a quick literature study of similar published antenna designs. Doing so for the multiband Windom or off-center-fed dipole antenna (see table below), leads to a stunning revelation. Over many years, antenna dimensions and feed locations have not changed much from the original single-wire design, whereas balun feed impedances have decreased from 500  $\Omega$  to 300 or even 200  $\Omega$ ! This, of course, is reason enough to become very suspicious about published multiband Windom designs.

**Table 1: Literature and web survey of multiband OCFDs**

design	year	$Z_{in}$	$l_{tot}$	$l_{short}$	offset*	$h_{agl}$	config.	bands
W8GZ	1929	500 $\Omega$	0.483 $\lambda$	0.18 $\lambda$	37.3%		single wire fed	single band
VS1AA <sup>4</sup>	1937	500 $\Omega$	41.00 m	13.60 m	33.2%		single wire fed	80 <sup>+</sup> 40 20 17 12 10 m
K4ABT	1949	200 $\Omega$	40.5 m	13.4 m	33.1%	6–12 m	horiz.	80 40 20 17 12 10 m
DJ2KY <sup>5</sup>	1971	300 $\Omega$	42 m	14 m	33.3%		horiz.	
“FD4” <sup>4</sup>	1971	300 $\Omega$	41.45 m	13.50 m	32.6%	8 m	inv.-V	80 <sup>+</sup> 40 20 17 12 10 m
“FD4” <sup>6</sup>	1971	300 $\Omega$	NA <sup>†</sup>	NA <sup>†</sup>	NA <sup>†</sup>	top: 12 m ends: 8 & 3 m	asymm. inv.-V	80 <sup>+</sup> 40 20 17 12 10 m
K8SYH	70’s	300 $\Omega$	39.08 m	12.74 m	32.6%		horiz.	
I7SWX <sup>7,8</sup>	1988	300 $\Omega$	41.0 m	13.5 m	32.9%		horiz.	
JA7KPI	1994	200 $\Omega$	41.0 m	13.6 m	33.2%	11 m	inv.-V	80 40 20 17 10 m
K3MT	1997	450 $\Omega$	42.06 m	12.65 m	30.1%	top: 14 m ends: 5 m	asymm. inv.-V	80 <sup>+</sup> 40 20 17 15 12 10 m
ON4BAA	2002	300 $\Omega$	41.00 m <sup>§</sup>	8.10 m	19.8%	14 m	horiz.	80 <sup>+</sup> 40 20 15 12 10 m
ON4BAA	2003	200 $\Omega$	41.00 m <sup>§</sup>	6.25 m	15.2%	14 m	horiz.	80 40 20 17 10 m
W8JI	2006	300 $\Omega$	41.8 m	8.35 m	20.0%		horiz.	80 <sup>+</sup> 40 20 15 10 m
ON4AA	2007	200 $\Omega$	40.66 m <sup>§</sup>	11.76 m	28.9%	17 m	horiz. center-load	80 40 30 20 15 10 m
K5GP	2008	200 $\Omega$	74.67 m	14 m	18.75%	5.5 m	horiz.	160 80 75 m
ON4AA	2018	200 $\Omega$	40.66 m <sup>§</sup>	8.13 m	20.0%	15 m	horiz. center-load	80 40 20 15 12 10 m
ON4AA	2018	200 $\Omega$	40.66 m <sup>§</sup>	8.13 or 11.76 m	20.0% or 29.3%	15 m	horiz. center-load	80 40 30 20 15 10 m

**Table notes:**

\* The open end of the antenna corresponds to 0% offset, the middle of the dipole to 50%.

† VSWR  $\leq 3 \div 1$  only within a narrow portion of the 80 m-band.

‡ Inconsistent data in brochure; end-insulator separation and heights do not correspond to angle between dipole legs at specified height.

§ Antenna made of soft PVC insulated HO7 V-K 4 wire.

As a matter of fact, I first made this table in 2002, when I held the call ON4BAA. It promptly triggered me to start using the power of computer modelling to study this poorly understood antenna. This resulted in two designs; a 300  $\Omega$  and a 200  $\Omega$  design. Both had feeding locations much closer to the antenna end than usual. This improved the VWSR-performance quite a bit. In 2006, Tom Rauch, W8JI, reproduced these findings with a slightly longer bare copper wire antenna.

However, two problems remained:

1. Although the traditional OCF dipole had very broad band-segments, the VSWR-minima of either the 80 m or the 40 m-band could not be perfectly aligned to the respective band-centers. Also, designs that did better on 80 m, lack 15 m. Apparently, OCF dipole designs had so far been a compromise between these three bands. The renowned “FD4” antenna was not an exception; Have a look at its VSWR specification on pages 13 and 14 of this [brochure](#).
2. Furthermore, none of these designs offered 30 m. This is a pity, because most hams would put up a wire antenna especially for the lower bands where beam antennas are more difficult to erect.

The next section explains why traditional OCF dipoles have these inherent limitations. Rest assured, both problems are dealt with by the CL-OCFD, also listed at the bottom of Table 1.

## Resonant lengths



It is often said that the HF amateur radio bands are **harmonics** of the 80 m-band. But is this really the case? The statement can easily be tested by considering a horizontal wire at a practical height (16.75 m or 55 ft) above a typical city lot ( $\sigma = 1 \text{ mS/m}$ ;  $\epsilon_r = 5$ ). I use **gauge 4 mm<sup>2</sup> copper wire insulated by a 0.8 mm-thick layer of soft PVC**. For

the remainder of only *this* section, the length of the wire is such that it achieves  $\lambda/2$  dipole resonance at the **geometric** center frequency  $f_c$  of the Region I 80 m-band (3.647 MHz). At the geometric center frequency of every other band, we will now determine how much wire needs to be added or subtracted to achieve **harmonic** resonance. It should be very little if the bands were truly harmonic.

Note that **bare copper wire at higher heights and above better ground would yield longer resonant lengths**, due to less capacitive coupling to the ground. Either way, this does not affect the validity of what follows. Let us now look at the even and odd harmonics in separate groups, starting with the even harmonics.

### Even harmonics

Table 2 clearly shows that the lower band-edges are exactly harmonic; all frequencies are integer multiples of 7.000 MHz. All even harmonic bands also have similar relative bandwidths; i.e. higher harmonic bands become proportionally wider. (The FM-portion of the 10 m-band is temporarily left out of con-



sideration.) Consequently, the **geometric** center frequencies of the **even harmonic bands** are also more or less harmonic and their harmonic **resonant lengths almost equal**. This is reflected in a low value for the **standard deviation** of the harmonic resonant lengths. In conclusion, it must be relatively easy to design an off-center-fed dipole for this set of even harmonics, provided we find a feed position with comparable feed impedances for all of these frequencies.

In this example, the **arithmetic mean** of the even harmonic resonant lengths is 40.66 m (133.4 ft). The mean resonant length corresponds to a fundamental resonant frequency of 3.440 MHz. We will keep this in mind for trimming our antenna once it is hung.

**Table 2: Resonant length of even harmonics**

band	$f_l$ (MHz)	$f_u$ (MHz)	$f_c$ (MHz)	harmonic	length	$\Delta$
40 m	7.000	7.200	7.099	2	40.52 m	-0.14 m
20 m	14.000	14.350	14.174	4	40.75 m	0.09 m
15 m	21.000	21.450	21.224	6	40.87 m	0.22 m
10 m	28.000	29.200	28.594	8	40.49 m	-0.17 m
				<b>arithmetic mean</b>	40.66 m	
				<b>standard deviation</b>	0.16 m	

## Odd harmonics

**Table 3: Resonant length of odd harmonics and required center-load for resonance with 40.66 m (133.4 ft) wire length**

band	$f_l$ (MHz)	$f_u$ (MHz)	$f_c$ (MHz)	harmonic	length	$X_{CL}$
80 m	3.500	3.800	3.647	1	38.68 m	-j91 $\Omega$
30 m	10.100	10.150	10.125	3	42.76 m	+j241 $\Omega$
17 m	18.068	18.168	18.118	5	39.89 m	-j153 $\Omega$
12 m	24.890	24.990	24.940	7	40.61 m	-j12 $\Omega$
				<b>standard deviation</b>	1.48 m	

Let us continue and have a look now at the odd harmonics. The situation turns out completely different. Even though 3.500 MHz is exactly one half of 7.000 MHz, the resonant length of the 80 m-band is, at its geometric center frequency, much shorter than the mean resonant length of the even harmonic bands. This is because, with 8.2%, the 80 m band has the broadest relative bandwidth of all amateur HF bands. It easily surpasses the 5.9% of the entire 10 m-band (28.000–29.700 MHz).

The 30 m band is equally problematic, being not even a real harmonic. Its resonant length is much longer than the mean of 40.66 m for the even harmonics.




Finally, we see that 17 and 12 m behave very well. The resonant length of the 12 m-band nearly coincides with the mean resonant length of the even harmonic bands.

Remember the problems with the OCF antennas discussed in the previous literature survey? This should no longer astonish us. Above tables revealed that the resonant lengths of the 80 and 30 m bands are true outliers compared to the harmonic resonant lengths of the other HF bands. It is the underlying cause for the partial 80 m coverage and the complete absence of 30 m-band coverage in prevalent OCF antenna designs.

Read on to see how both problems can be solved.


# Center-loading

Below diagram shows the current distribution along an antenna wire for its first eight harmonic resonances. The current distributions of the even harmonics are plotted above the wire, those of the odd harmonics below. Do you notice anything special?

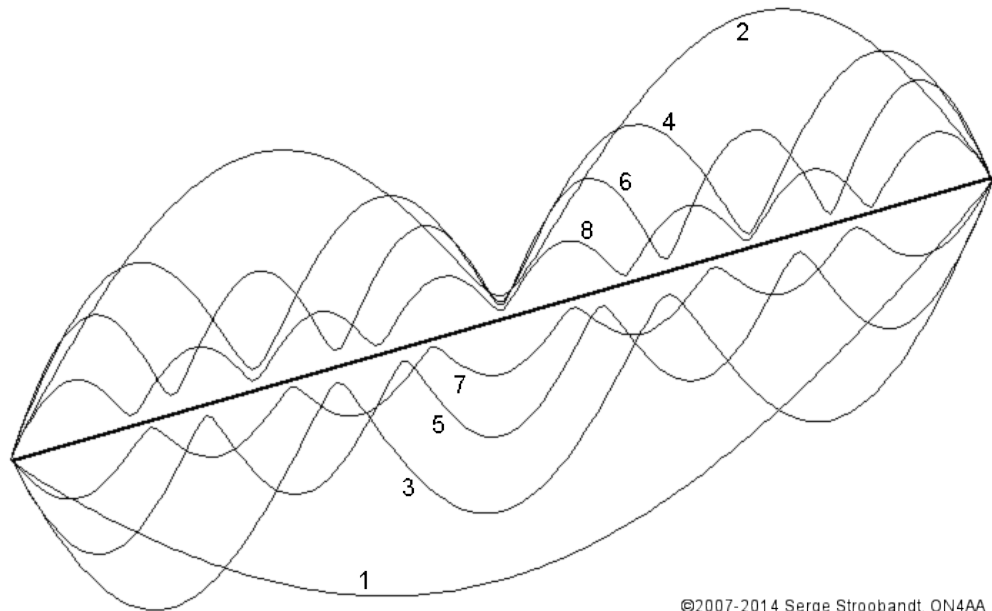

©2007-2014 Serge Stroobandt, ON4AA

**Figure 5:** Current distribution of the first eight harmonic resonances along an antenna wire

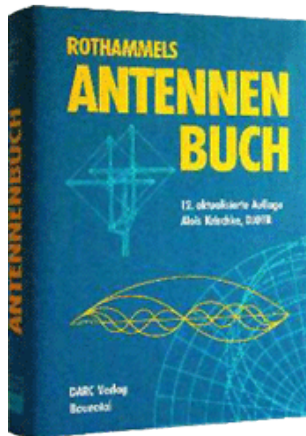

**inspiring book cover**

At least, I do. It may seem trivial, but all even harmonics have (almost) zero current at the center of the antenna, whereas all odd harmonics experience a current maximum at this location.


Zero current for the even harmonics at the center, implies that I can literally do what I want at the center of the antenna without upsetting the even harmonics. I can even cut the antenna in two! As a matter of fact, this is precisely what we are going to do!

It might seem unfortunate that the wavelengths of the 80 m and 30 m-bands are too short, respectively, too long to be true harmonics of the other bands. However, luck struck upon seeing that both problematic bands happen to be odd harmonics. Please, note that this statement does not hold when considering a double-sized OCFD with 160 m as the fundamental frequency. This antenna design is therefore not scalable!

What remains to be done now, is to cut the antenna in half and insert a center-loading network in series. This network will need to add the necessary center loading reactances  $X_{CL}$  (see Table 3 above) in order to render the antenna resonant at the odd harmonics. As mentioned before, resonance makes matching at multiple frequencies a lot easier.

## Capacitive center load

Let's start easy. When we have a 40.66 m (133.4 ft) long wire hanging in our garden, at least we would like it to be also perfectly resonant on the popular 80 m-band. Table 3 told us that the wire is too long for resonance at 80 m. A capacitive reactance of  $-j91.3 \Omega$  needs to be put in series at the center of the antenna. At 3.647 MHz this corresponds to \*\*a center load capacitor of 478 pF, say 470 pF.

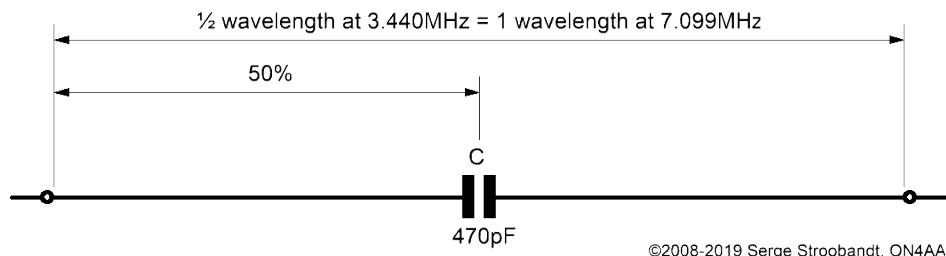


**Figure 6:** A center-loaded wire, resonant on six bands; four even harmonics (40, 20, 15 & 10 m) and one odd harmonic (80 m). The capacitor has a nominal value of 470 pF. Its effective capacitance should be about 478 pF at 3.647 MHz.

However, by placing this capacitor at the center, we will upset the other odd harmonic resonances, namely 30 and 17 m. By coincidence, the antenna remains resonant on the odd harmonic of 12 m because the capacitor of 470 pF corresponds to a reactance of  $-j13.5$  at 24.990 MHz.

## Series LC center load

Now let us try to regain another odd harmonic, in addition to the already recovered 80 m band. For some, but not all odd harmonics, this can be done by loading the center of the antenna with a series LC network (see Table 4).

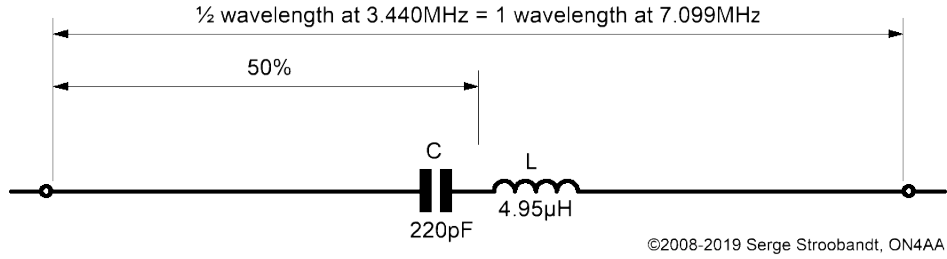

**Figure 7:** A center-loaded wire, resonant on six bands; four even harmonics (40, 20, 15 & 10 m) and two odd harmonics (80 & 30 m)

**Table 4: Center-loading series LC networks for odd harmonic resonance**

$f_{\text{odd}}$ (MHz)	$X_{\text{CL}}$ @f	odd harmonics	C	L	$f_{\text{res}}$ (MHz)	$X_L$ @f
3.647	-j91.3 $\Omega$	80 m	478 pF	no L	no L	no L
10.125	+j241 $\Omega$	80 & 30 m	213 pF	4.95 $\mu\text{H}$	4.900	+j314.7 $\Omega$
18.118	-j153 $\Omega$	80 & 17 m	692 pF	no solution!	no solution!	no solution!
24.940	-j11.8 $\Omega$	80 & 12 m	477 pF	10.1 nH	72.486	+j1.58 $\Omega$

**Example: second row in above table**

Placing a 213 pF, say 220 pF, capacitor in series with a 4.95  $\mu\text{H}$  inductor at the center of the antenna will make the antenna resonant at 80 & 30 m, as well as all even harmonics. The resonant frequency of the center load will be 4.900 MHz. At 10.125 MHz, the series inductor L should have a (measured) reactance of +j314.7  $\Omega$ . Knowing these values helps with the design and fine-tuning of the series inductor L.

## Derivation of series LC center load component values

The center load component values C and L in Table 4, as well as their resonant frequency  $f_{\text{res}}$  are obtained as follows.

$$\begin{cases} \omega_1 L - \frac{1}{\omega_1 C} = X_1 & \text{(I)} \\ \omega_2 L - \frac{1}{\omega_2 C} = X_2 & \text{(II)} \end{cases} \quad (2)$$

$\omega_1$  and  $\omega_2$  represent the radial frequencies of the geometric center of any of two odd harmonic bands in Table 4, whereby  $\omega_i = \tau \cdot f_{\text{odd},i} = 2\pi \cdot f_{\text{odd},i}$ , whereas  $X_1$  and  $X_2$  are the required reactances.

$$\text{(I)} \Rightarrow L = \frac{1}{\omega_1} \left[ X_1 + \frac{1}{\omega_1 C} \right] \quad \text{(III)} \quad (3)$$

$$\text{(III) in (II)} : \frac{\omega_2}{\omega_1} \left[ X_1 + \frac{1}{\omega_1 C} \right] - \frac{1}{\omega_2 C} = X_2 \quad (4)$$

$$\Rightarrow \left[ \frac{\omega_2}{\omega_1^2} - \frac{1}{\omega_2} \right] \frac{1}{C} = X_2 - \frac{\omega_2}{\omega_1} X_1 \quad (5)$$

$$\Rightarrow C = \left[ \frac{\omega_2}{\omega_1^2} - \frac{1}{\omega_2} \right] \left[ \frac{\omega_1}{\omega_1} X_2 - \frac{\omega_2}{\omega_1} X_1 \right]^{-1} \quad (6)$$

$$\Rightarrow C = \left[ \frac{\omega_2}{\omega_1^2} - \frac{1}{\omega_2} \right] \frac{\omega_1}{\omega_1 X_2 - \omega_2 X_1} = \left[ \frac{\omega_2}{\omega_1} - \frac{\omega_1}{\omega_2} \right] \frac{1}{\omega_1 X_2 - \omega_2 X_1} \quad (7)$$

$$\Rightarrow C = \frac{\omega_2^2 - \omega_1^2}{\omega_1 \omega_2 (\omega_1 X_2 - \omega_2 X_1)} \quad (\text{IV}) \quad (8)$$

Both  $C$  and  $L$  are known at this point, but the expression for  $L$  is further developed:

$$\text{(IV) in (III): } L = \frac{1}{\omega_1} \left[ X_1 + \frac{\omega_2 (\omega_1 X_2 - \omega_2 X_1)}{\omega_2^2 - \omega_1^2} \right] \quad (9)$$

$$\Rightarrow L = \frac{1}{\omega_1} \left[ \frac{\omega_2^2 X_1 - \omega_1^2 X_1 + \omega_1 \omega_2 X_2 - \omega_2^2 X_1}{\omega_2^2 - \omega_1^2} \right] \quad (10)$$

$$\Rightarrow L = \frac{\omega_2 X_2 - \omega_1 X_1}{\omega_2^2 - \omega_1^2} \quad (11)$$

Hence, the resonant frequency of the center load:

$$\omega_{\text{res}} = \frac{1}{\sqrt{LC}} = [LC]^{-\frac{1}{2}} = \left[ \frac{\omega_2 X_2 - \omega_1 X_1}{\omega_1 \omega_2 (\omega_1 X_2 - \omega_2 X_1)} \right]^{-\frac{1}{2}} \quad (12)$$

$$\Rightarrow \omega_{\text{res}} = \sqrt{\omega_1 \omega_2 \frac{\omega_1 X_2 - \omega_2 X_1}{\omega_2 X_2 - \omega_1 X_1}} \quad \text{and} \quad f_{\text{res}} = \frac{\omega_{\text{res}}}{2\pi} \quad (13)$$

## More bands?

Yeah, right. Let me disappoint you by saying that things are not as easy as adding just one additional reactive element in series or parallel to obtain yet another band. After all, the center load impedance  $X_{\text{CL}}$  would have to change sign twice. However, theoretically it should be possible to devise a passive network that makes the antenna resonant on all odd harmonic bands. Nonetheless, such a network will be far from practical to have it hanging along a wire. Moreover,

it remains to be seen whether a low VSWR feed point can be found that accommodates all these bands (see next section). The challenge is there for the taker!

As mentioned before, it is not possible to scale this antenna to a longer 160 m-version. Would one try to do so, the problematic 80 m-band would become an even harmonic and hence impossible to be influenced by center-loading the antenna.

The 6 m-band (50–52 MHz) is the 14<sup>th</sup> harmonic of the 80m-band. Being such a high harmonic, it becomes prohibitively difficult to pinpoint a low VSWR 6 m-band feeding offset.

## No resonant traps

Please, do allow me to tackle some anticipated criticism. Uninformed spirits may argue that the two-element network of this antenna is a resonant trap adding significant loss.

This is clearly not the case! The two-element center-loading network is not resonant at any of the amateur bands and is therefore not acting as a trap. It is strictly a loading network, adding relatively little reactance. As such, it does not contribute more loss than any other loading inductors commonly employed in the very best of commercial and home-made low-band Yagi-Uda designs.

## Optimal offset & input impedance

Now that the antenna can be made resonant on six bands, a «sweet spot» needs to be found where VSWR at a given feed impedance is low on all six bands. To determine this ideal feed offset, VSWR graphs at different feed impedances are plotted for all frequency bands and all possible offset percentages. These are then compared. This is done for the 6-band version of the CL-OCFD which includes 30m resonance. Note that 0% offset corresponds to the open end of the antenna; 50% offset corresponds to the middle of the dipole.

Below graphs were produced with the antenna at 16.75 m (55 ft) over city ground ( $\sigma = 1 \text{ mS/m}$ ;  $\epsilon_r = 5$ ) in the near field. Running the model with different ground characteristics revealed that the VSWR of the antenna is barely influenced by the RF properties of the ground underneath (not considering height above the ground for the moment.)

## Modelling with 4nec2

Here is the [4nec2 input file](#) of the ON4AA 200  $\Omega$  CL-OCFD antenna over good RF ground ( $\sigma = 10$  mS/m;  $\epsilon_r = 14$ ).

The model requires [4nec2](#) version 5.7.0 or higher.

An [EZNEC model](#) is also available.


## About rendering VSWR-offset graphs

Here is an interesting fact: every line of every VSWR-offset graph below has been drawn on the basis of 98 data points. Every single of these data point then again resulted from one complete antenna analysis. In other words, six bands times 98 data points, means 588 [NEC2](#) runs were necessary to draw just one complete six-band VSWR-offset graph.


In 2002, the only way to obtain such a graph was by undertaking the monastic task of running [EZNEC](#) 98 times and manually copying 1176 numbers —input impedances are complex numbers— onto a spreadsheet. This was done so for every of the four VSWR-offset graphs below.

A couple of years later, this task could be automated, thanks to [4nec2](#). This excellent antenna modelling interface for NEC2 allows one to sweep any arbitrary antenna variable. What is more, 4nec2 is free-ware. Thank you for that, Arie Voors! Nonetheless, as a [FLOSS](#) advocate, I am still hoping for Arie to publish the source code. This would safeguard future development should the original developer be no longer around. Even though 4nec2 is coded for MicroSoft Windows™, I run 4nec2 flawlessly on [GNU/Linux](#) using the equally free [Playon Linux](#) software.




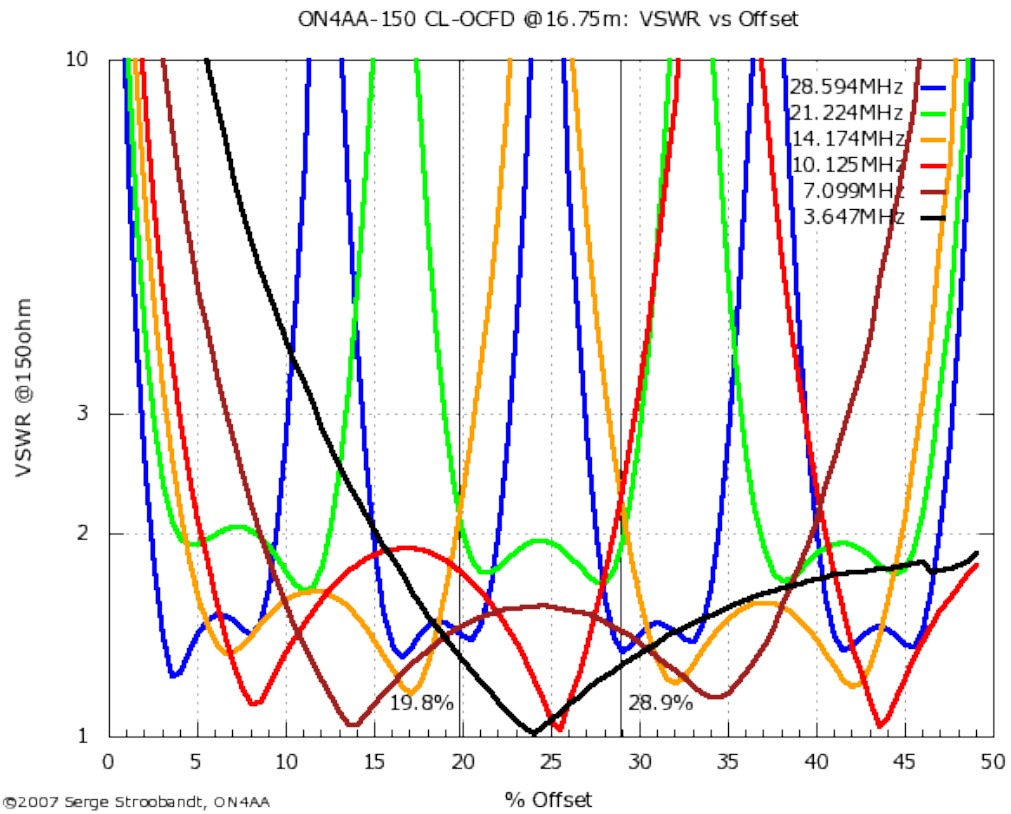

**Figure 8:** VSWR of the six-band 150  $\Omega$  CL-OCFD as a function of feed point offset

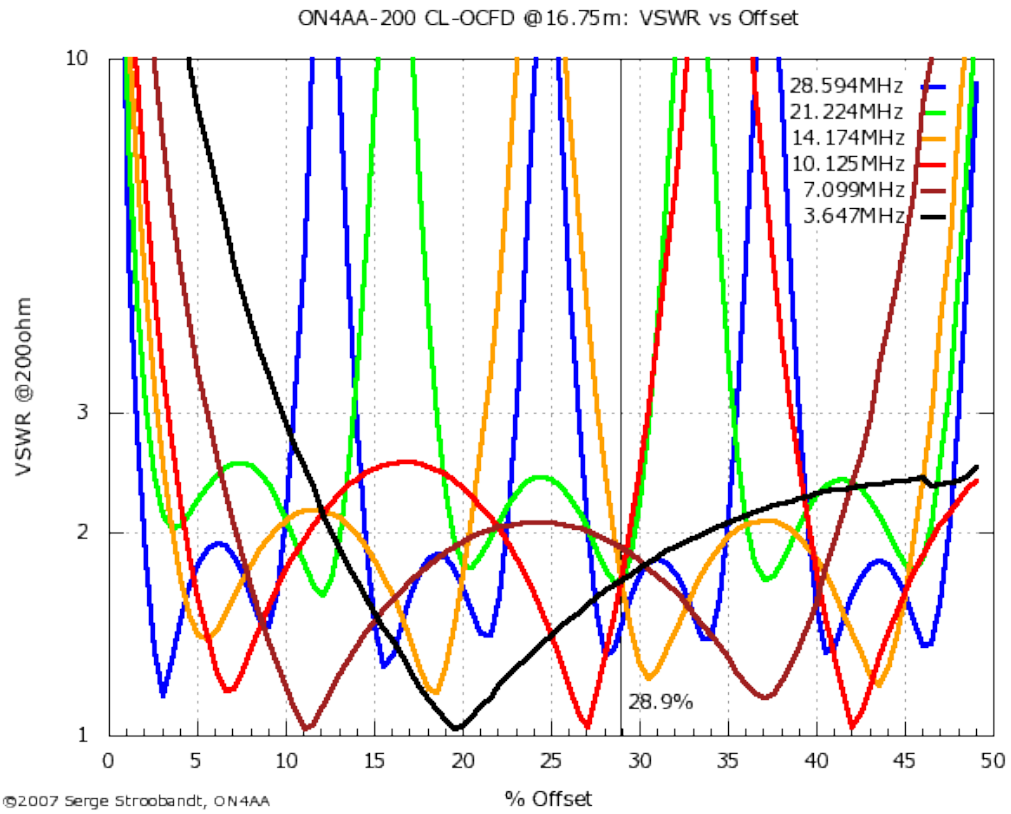

**Figure 9:** VSWR of the six-band 200  $\Omega$  CL-OCFD as a function of feed point offset

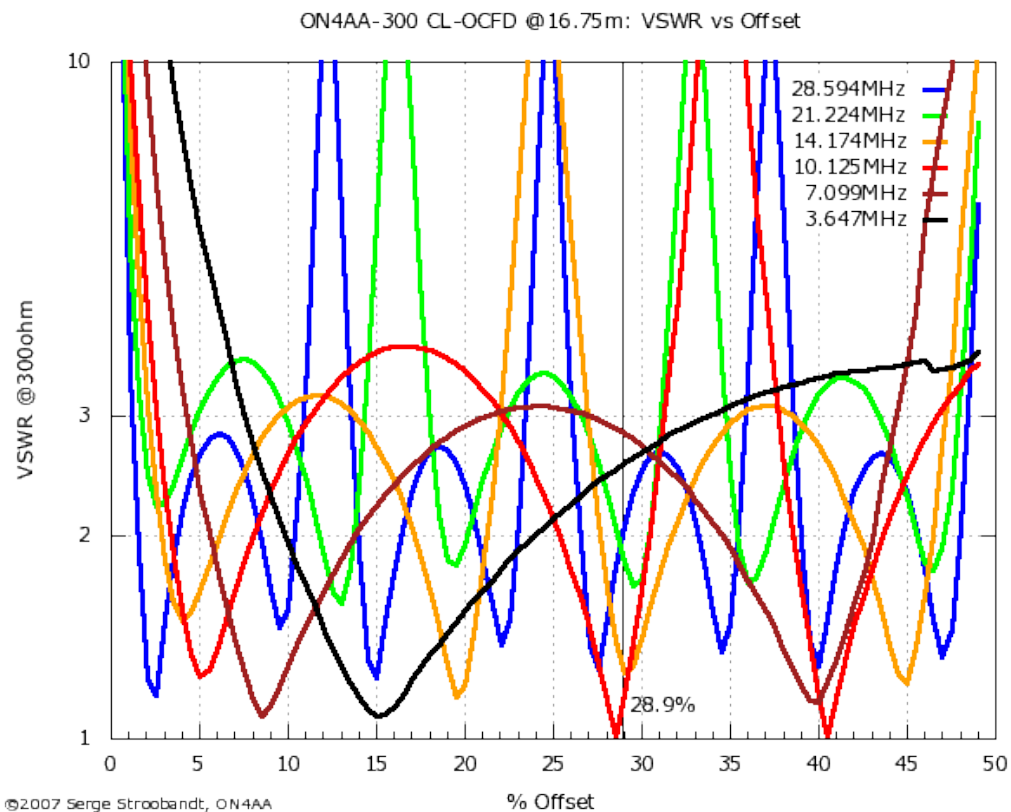

**Figure 10:** VSWR of the six-band 300  $\Omega$  CL-OCFD as a function of feed point offset

## Avoid low-impedance sources

VSWR versus offset plots were rendered for 150  $\Omega$  and 100  $\Omega$  sources. These plots equally showed points where low VSWR coincided for a number of bands. However, there is one caveat. These VSWR vs. offset plots are for spot frequencies only. At the band edges, VSWR actually increases a lot with low-impedance sources. (Here are examples for 20 m and 15 m with a 150  $\Omega$  source at 19.8% offset.) This happens because using a low-impedance source results in an antenna with a higher loaded Q-factor. Only an antenna with a low loaded Q-factor will provide full 80m band coverage, as explained before.

## Optimal offset with 200 $\Omega$ source

For a feed impedance of 200  $\Omega$ , all bands yield a VSWR below 2:1 at 29.3% offset.

## Avoid a 300 $\Omega$ source

Feeding the antenna from a 300  $\Omega$  source is not desirable since the VSWR will always be high on at least one of the resonant bands.

## Avoid high-impedance sources

With high-impedance sources, VSWR minima increasingly coincide at small offsets, eventually resulting in a high-impedance end-fed antenna. However, high-impedance sources come at the price of increased problems with sheath currents, feed point arcing and wide-band transforming losses. These designs do exist, but their analysis is beyond the scope of this article.

## Designs


**Table 5: Multiband OCFDs designed by ON4AA**

bands	$l_{tot}$	$Z_{in}$	offset*	center load
80 40 20 15 12 10 m	$\lambda/2$ at 3.440 MHz	200 $\Omega$	20.0%	470 pF <sup>†</sup>
80 40 30 20 15 10 m	$\lambda/2$ at 3.440 MHz	200 $\Omega$	20.0% (29.3%)	220 pF + 4.95 $\mu$ H
40 20 15 10 m	$3 \times \lambda/2$ at 21.224 MHz	200 $\Omega$	40.5%	—

**Table notes:**


\* The open end of the antenna corresponds to 0% offset, the middle of the dipole to 50%.

Only 200  $\Omega$  feeds produce practicable results for a true multi-band design. Therefore, a feed impedance of 200  $\Omega$  and a feed offset of 20% or 29.3% are kept as the optimal result of this design exercise. Here is how the 200  $\Omega$  six-band CL-OCFD will look like when adding a 10 kV 1 W thick film metal oxide resistor R of about 1 to 10 M $\Omega$  to bleed off static charges and hence protect the capacitor C from breaking down.

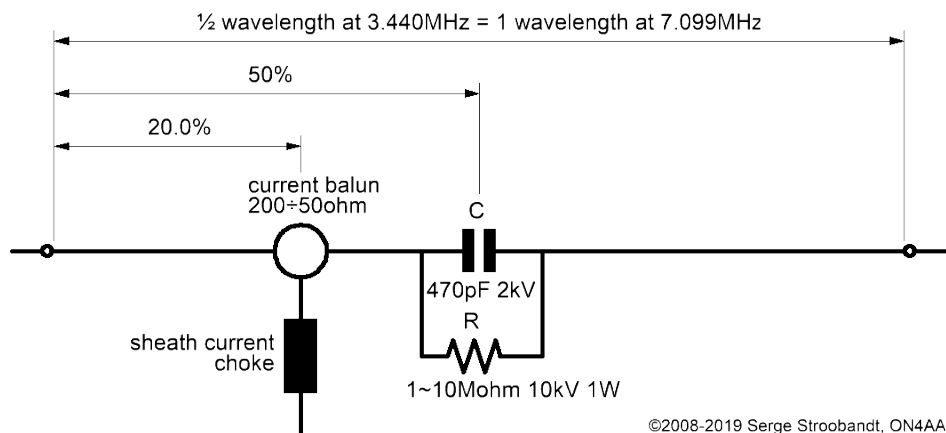

**Figure 11:** CL-OCFD with 80, 40, 20, 15, 12, & 10 m coverage


The same optimal offset equally applies to the version of the CL-OCFD with 30 m instead of 12 m-band coverage.

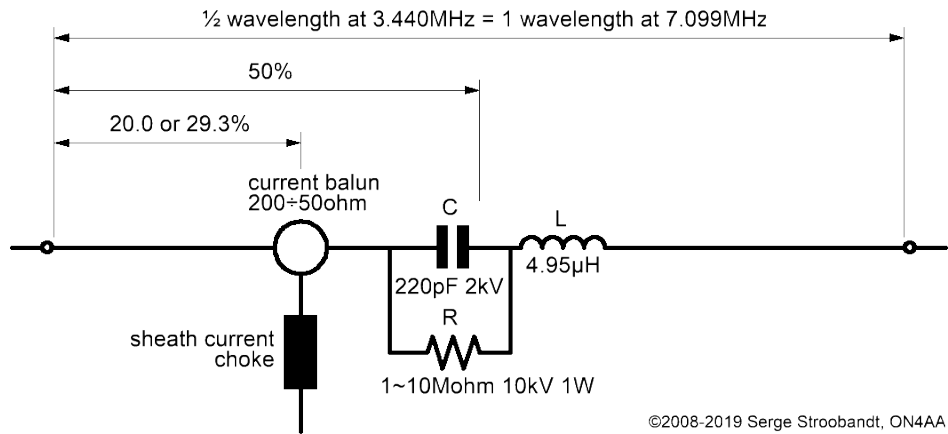


**Figure 12:** CL-OCFD with 80, 40, 30, 20, 15 & 10 m coverage

## VSWR


Below VSWR curves were rendered with [4nec2](#). The six-band CL-OCFD antenna was modelled hanging at 16.75 m (55 ft) above very poor city ground ( $\sigma = 1 \text{ mS/m}$ ;  $\epsilon_r = 5$ ). In reality, the VSWR measured in the shack will be lower because of damping by the feed line losses. [Here is the 4nec2 input file.](#)

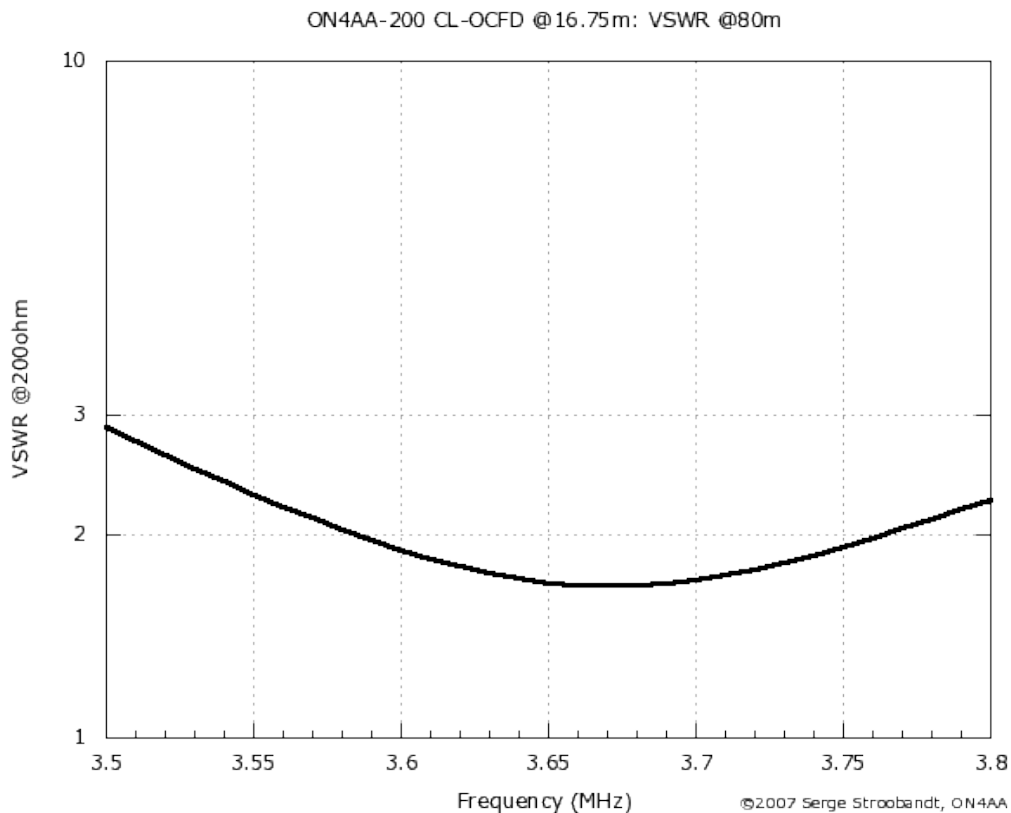


**Figure 13:** VSWR of the six-band 200  $\Omega$  CL-OCFD with 28.9% offset on 80 m

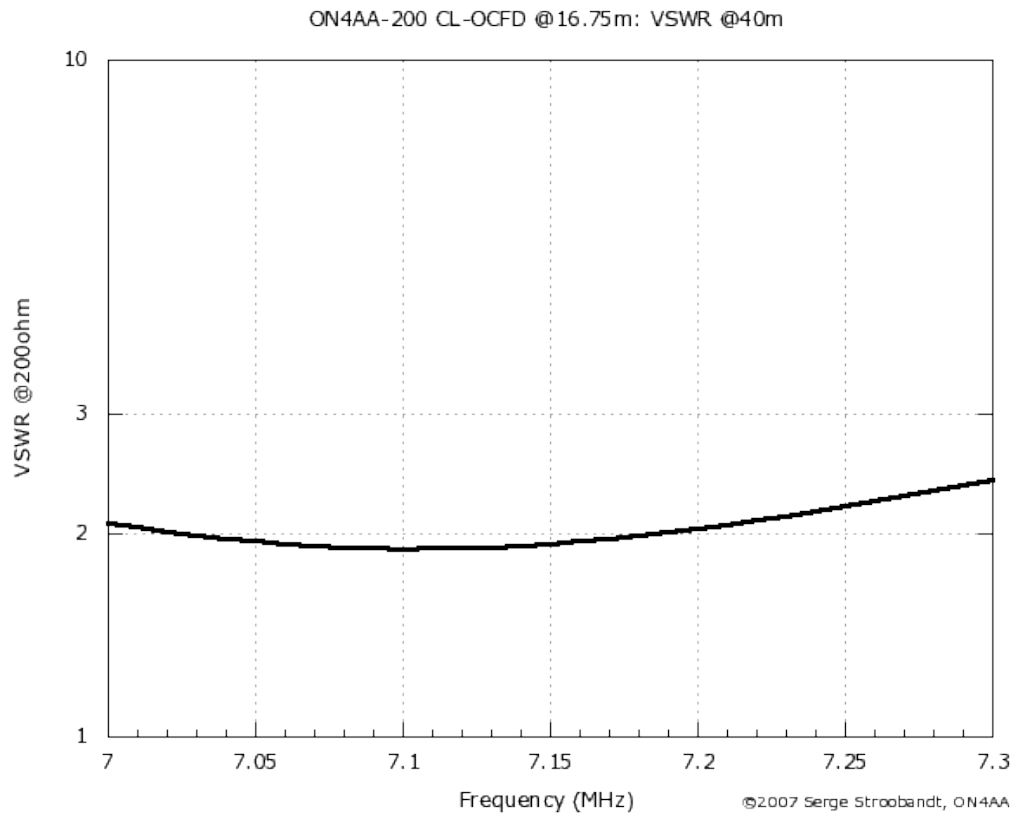


**Figure 14:** VSWR of the six-band 200 Ω CL-OCFD with 28.9% offset on 40 m

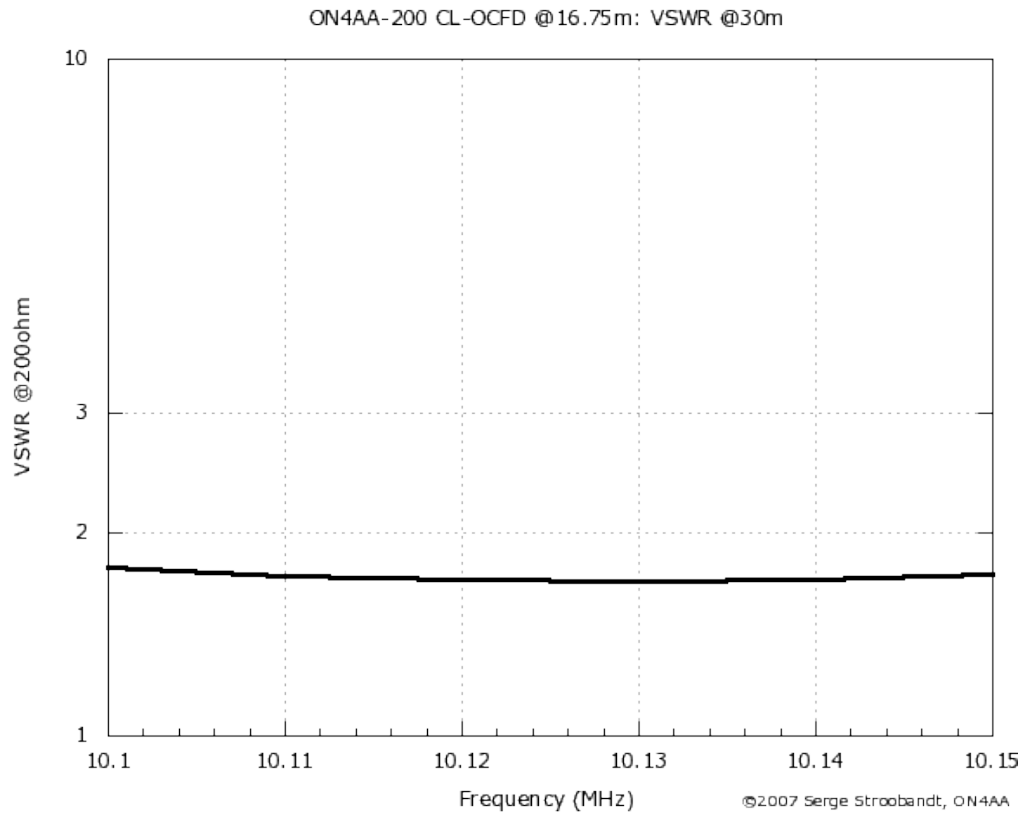


**Figure 15:** VSWR of the six-band 200 Ω CL-OCFD with 28.9% offset on 30 m

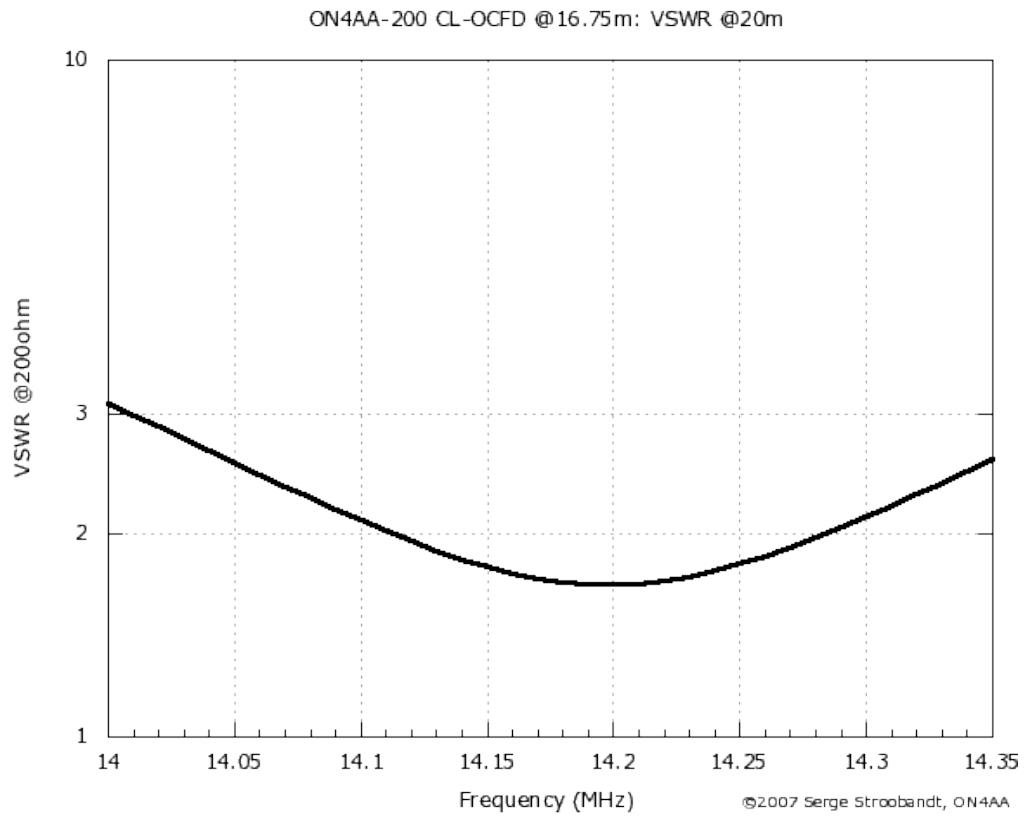

**Figure 16:** VSWR of the six-band 200  $\Omega$  CL-OCFD with 28.9% offset on 20 m

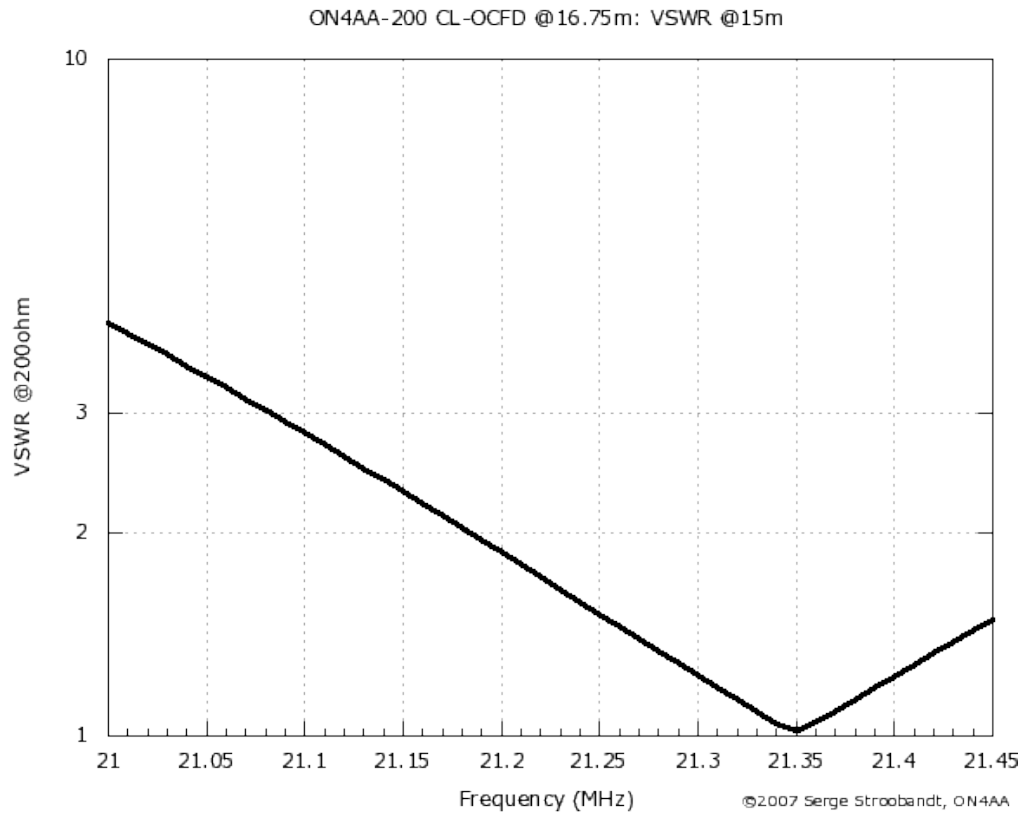

**Figure 17:** VSWR of the six-band 200  $\Omega$  CL-OCFD with 28.9% offset on 15 m

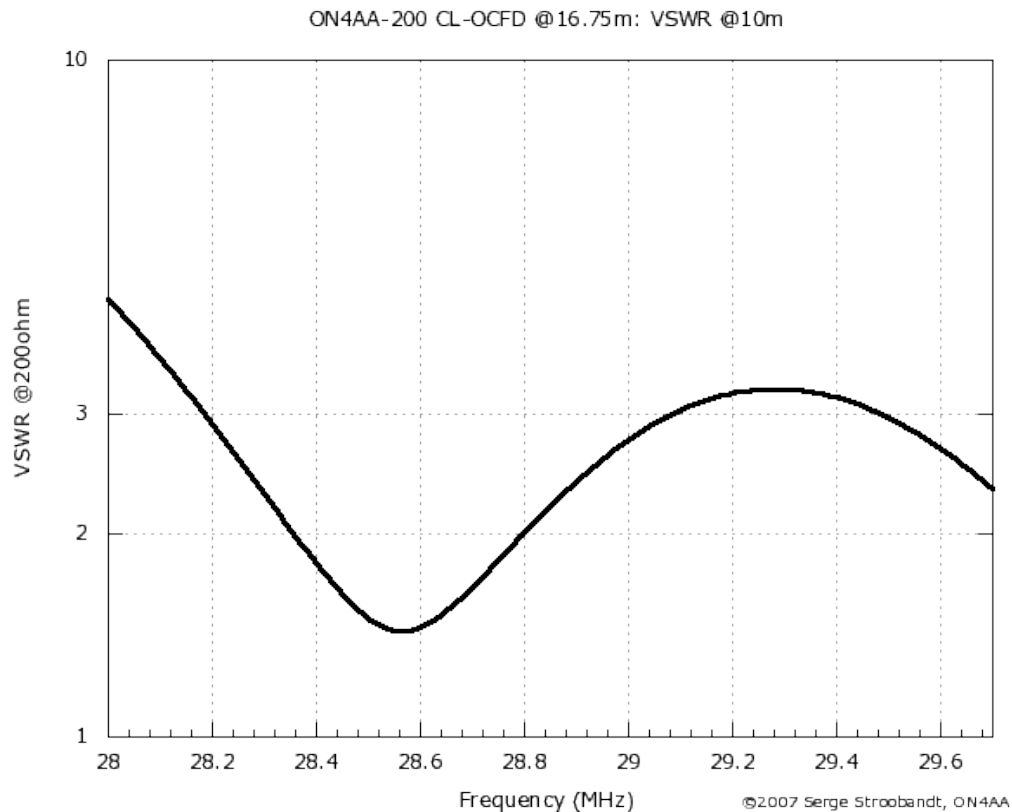

**Figure 18:** VSWR of the six-band 200  $\Omega$  CL-OCFD with 28.9% offset on 10 m

## VSWR spectrum sweep

The six-band 200  $\Omega$  CL-OCFD with 28.9% offset was also modelled 16.75 m (55 ft) above good RF ground ( $\sigma = 10\text{mS/m}$ ;  $\epsilon_r = 14$ ) using **EZNEC**.


### Modelling with EZNEC

Here is the **EZNEC input file**. The model employs real ground in the near field of the antenna; not perfect MININEC ground.

A **4nec2 model** is also available.

From comparison with previous modelling above very poor city ground, one may conclude that, at least at a height of 16.75 m (55 ft), VSWR is hardly influenced by ground quality. Furthermore, EZNEC in comparison to 4nec2 indicates that the antenna needs to be slightly longer, namely: 40.812 m. Anyhow, a fail-proof **trimming procedure** will be presented further on.



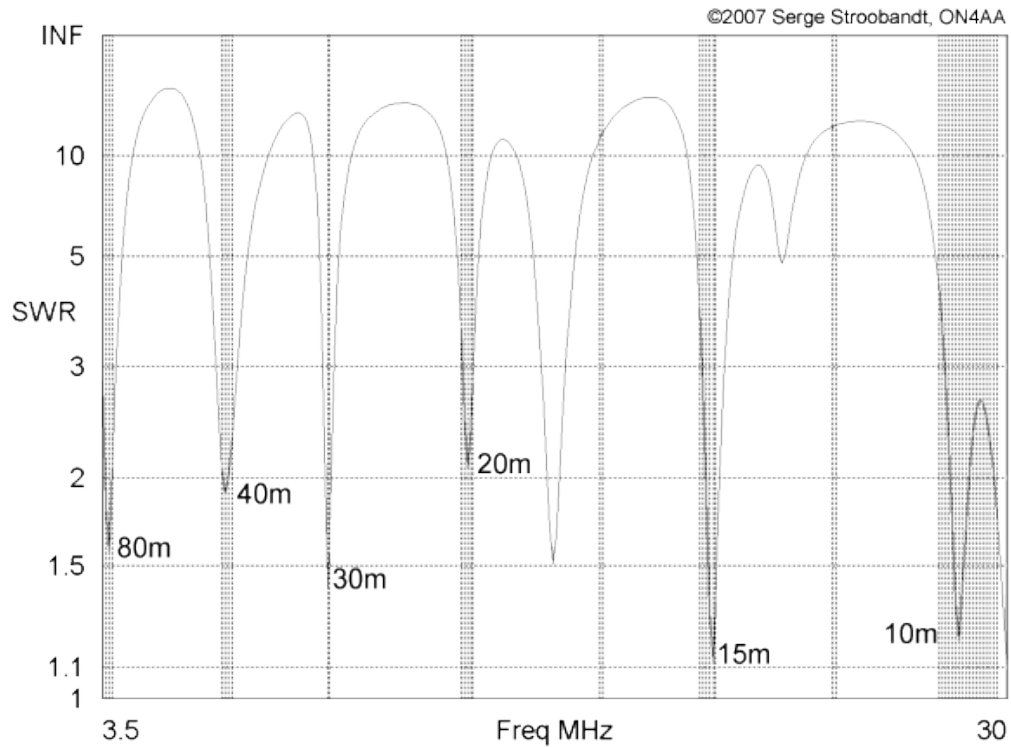

**Figure 19:** VSWR of the six-band 200  $\Omega$  CL-OCFD as a function of frequency

## Radiation patterns

The following 72 power gain patterns in dBi were obtained using [4nec2](#) and good RF ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ ). The [4nec2 input file](#) is available for [download](#).

# 80 m-band radiation patterns


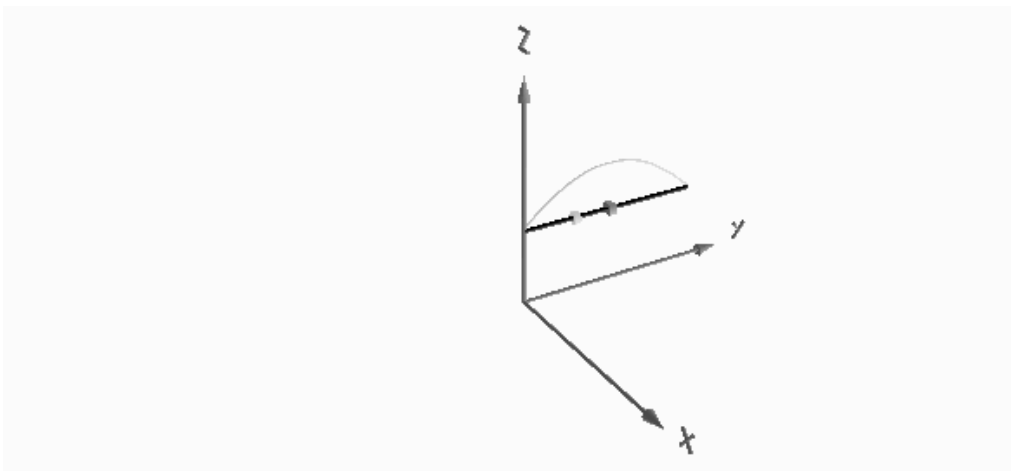


Figure 20: 80 m-band or fundamental resonant current distribution

Table 6: 80 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )

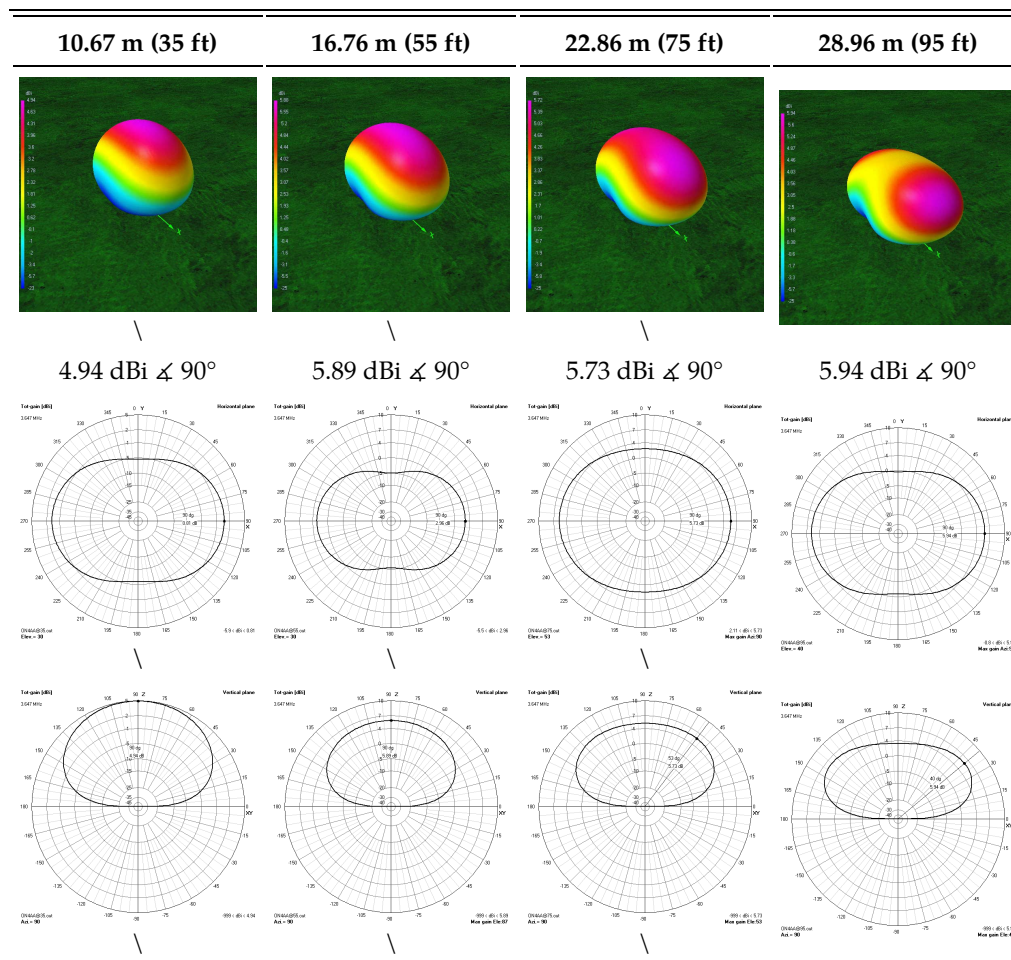

# 40 m-band radiation patterns


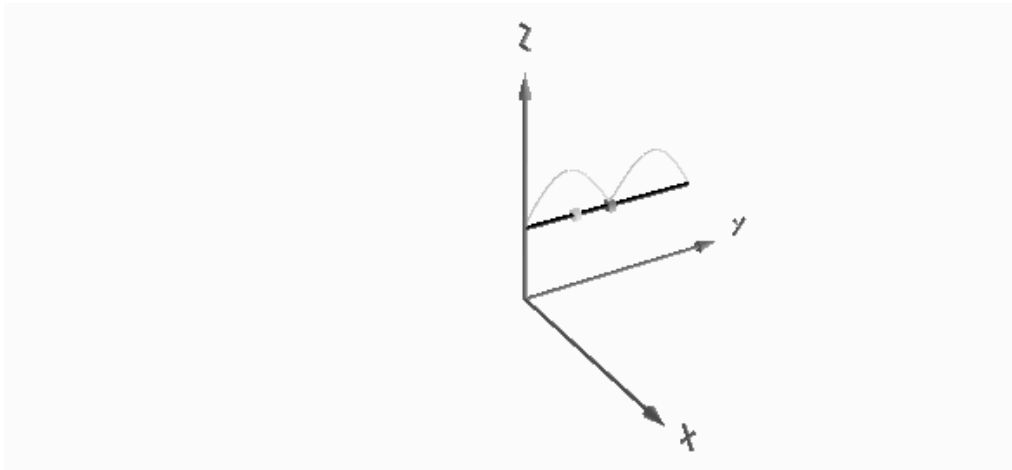


Figure 21: 40 m-band or second harmonic current distribution

Table 7: 40 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )

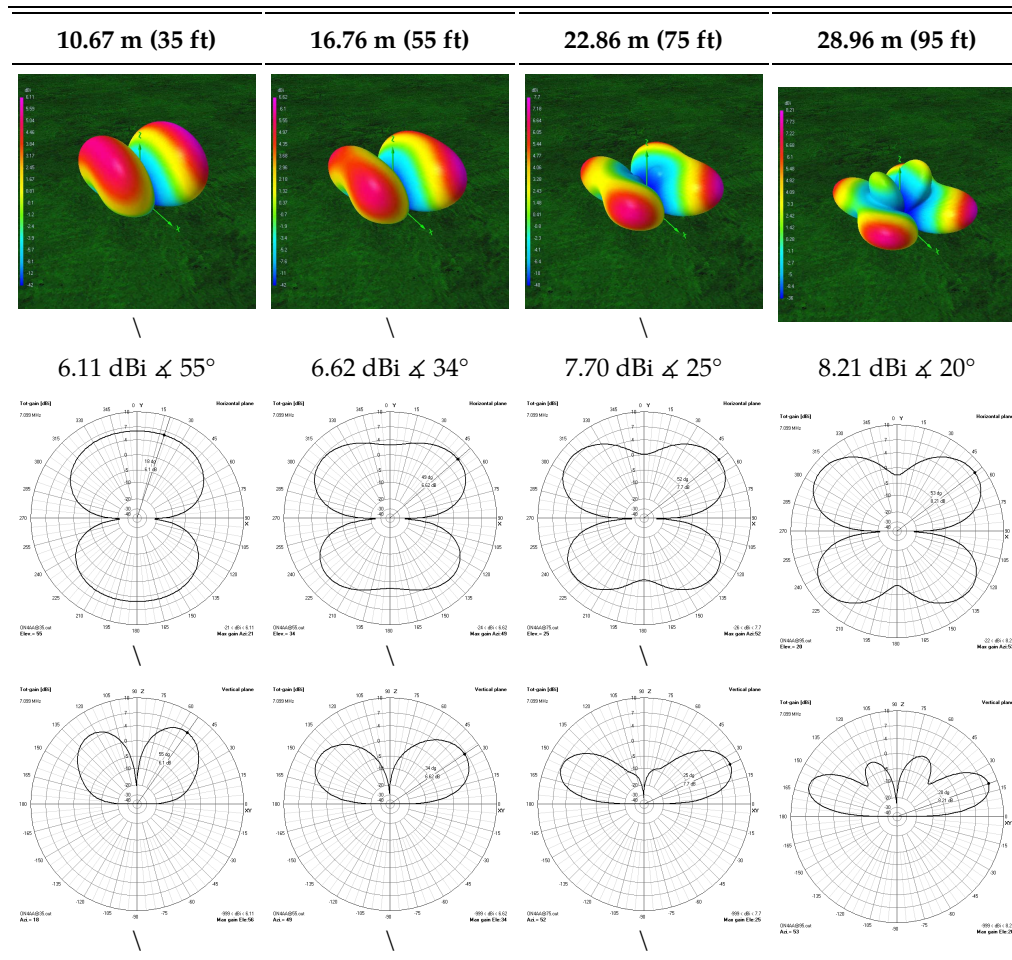

# 30 m-band radiation patterns


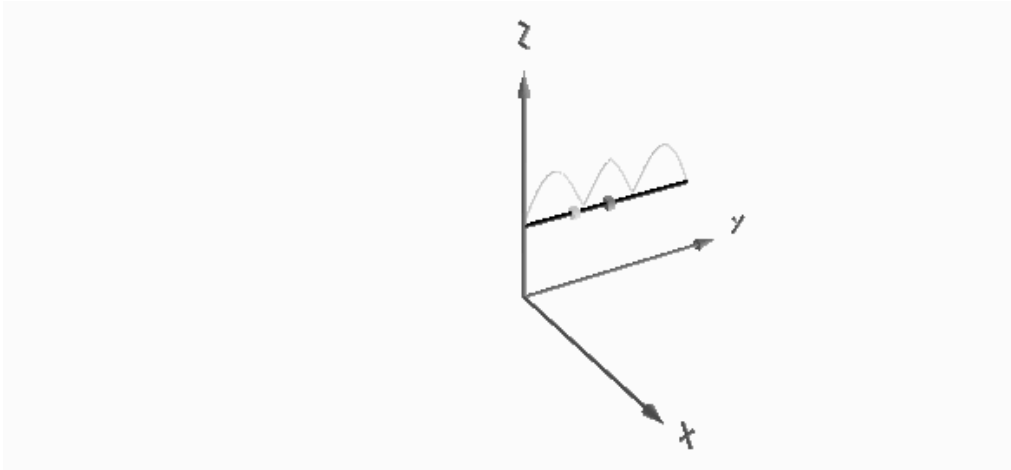


Figure 22: 30 m-band or third harmonic current distribution

Table 8: 30 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )

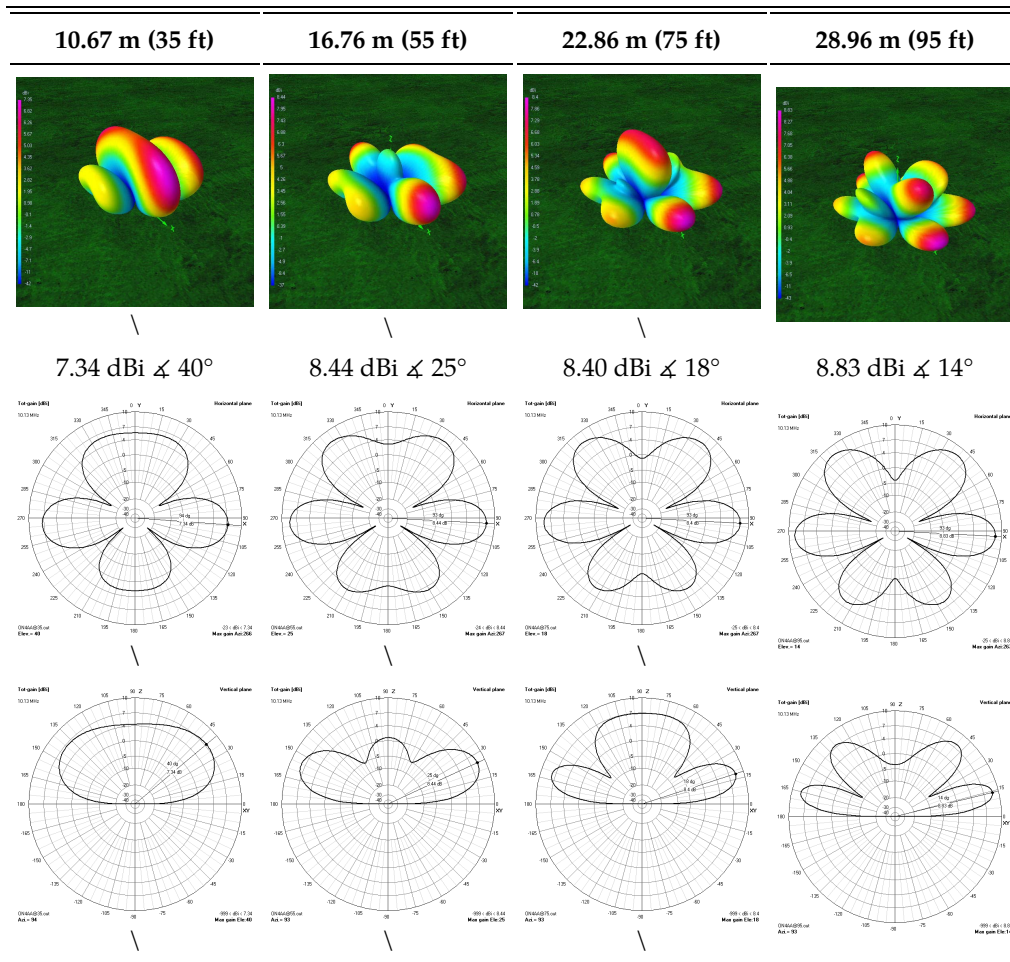

# 20 m-band radiation patterns


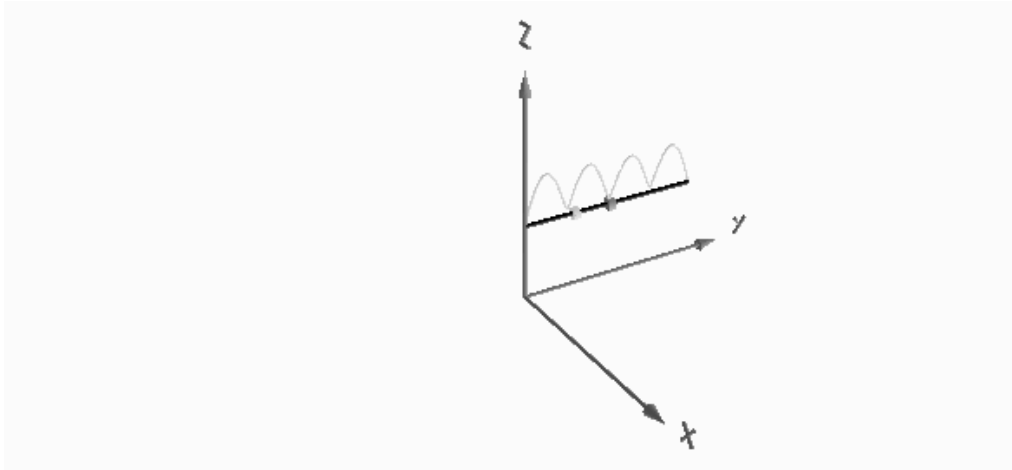


Figure 23: 20 m-band or fourth harmonic current distribution

Table 9: 20 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )

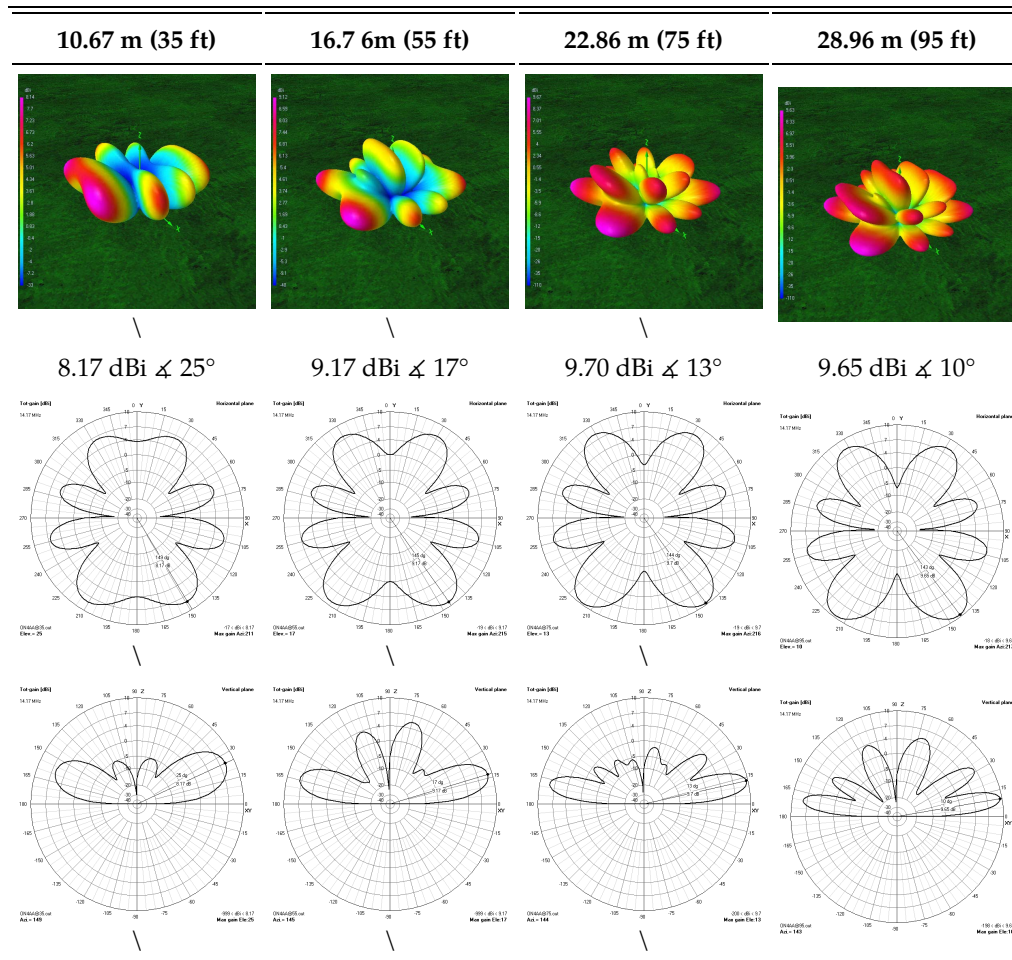

# 15 m-band radiation patterns


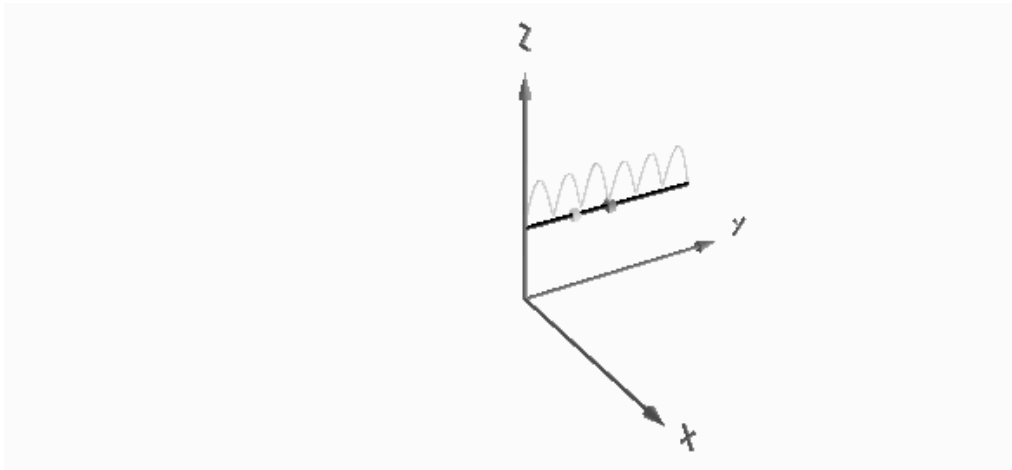


Figure 24: 15 m-band or sixth harmonic current distribution

Table 10: 15 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )



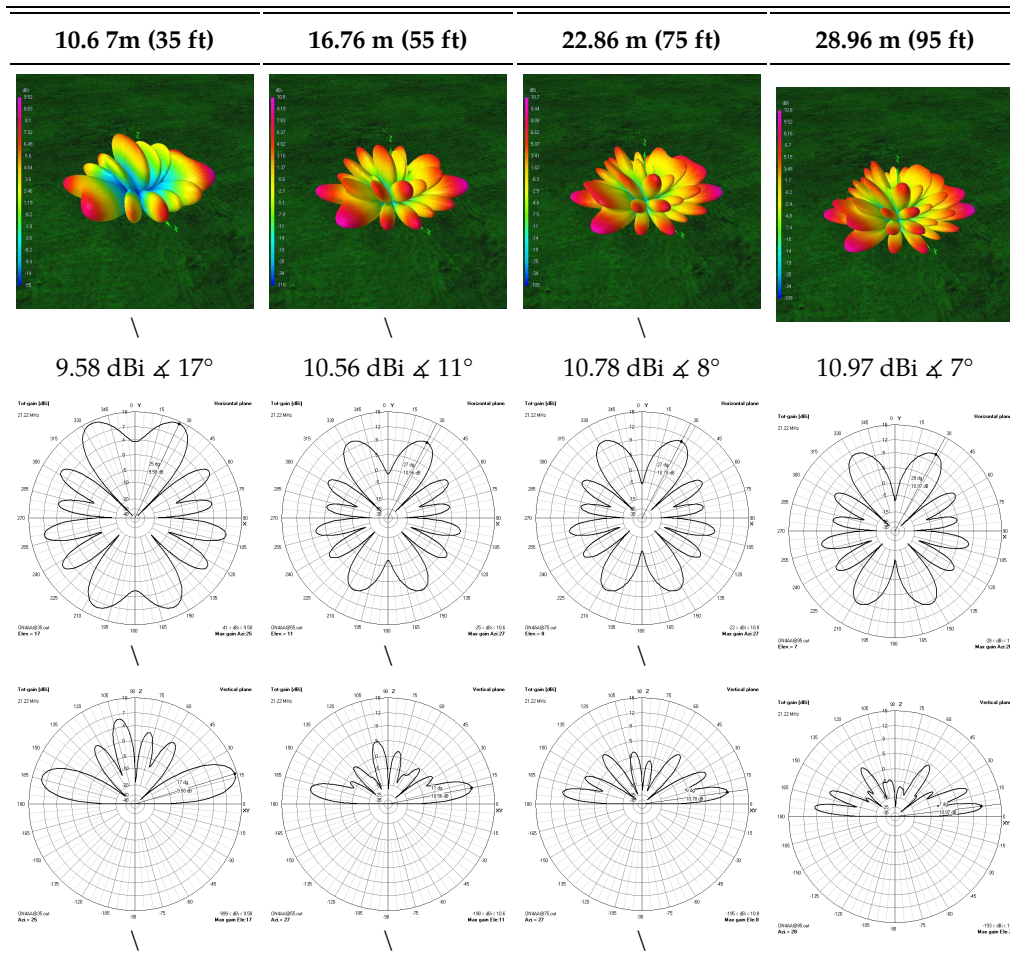

# 10 m-band radiation patterns


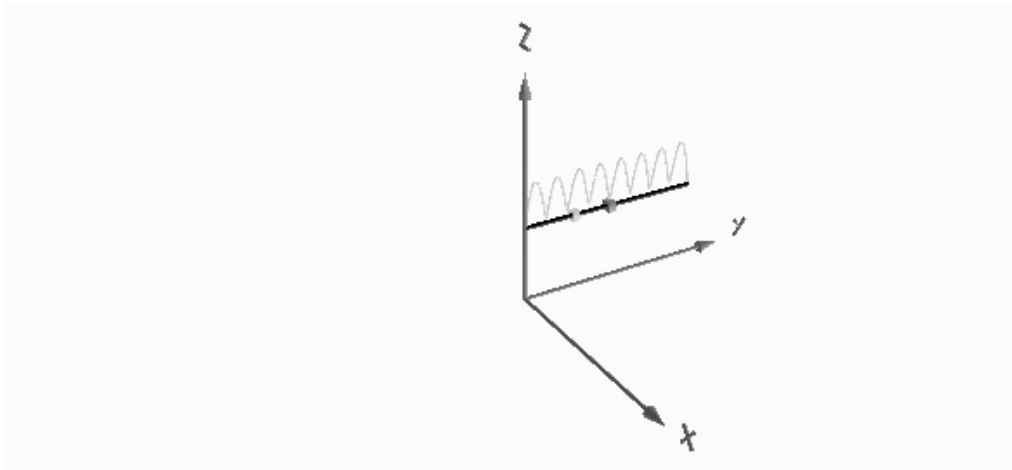


Figure 25: 10 m-band or eighth harmonic current distribution

Table 11: 10 m-band radiation patterns in function of height above good ground ( $\sigma = 10 \text{ mS/m}$ ;  $\epsilon_r = 14$ )



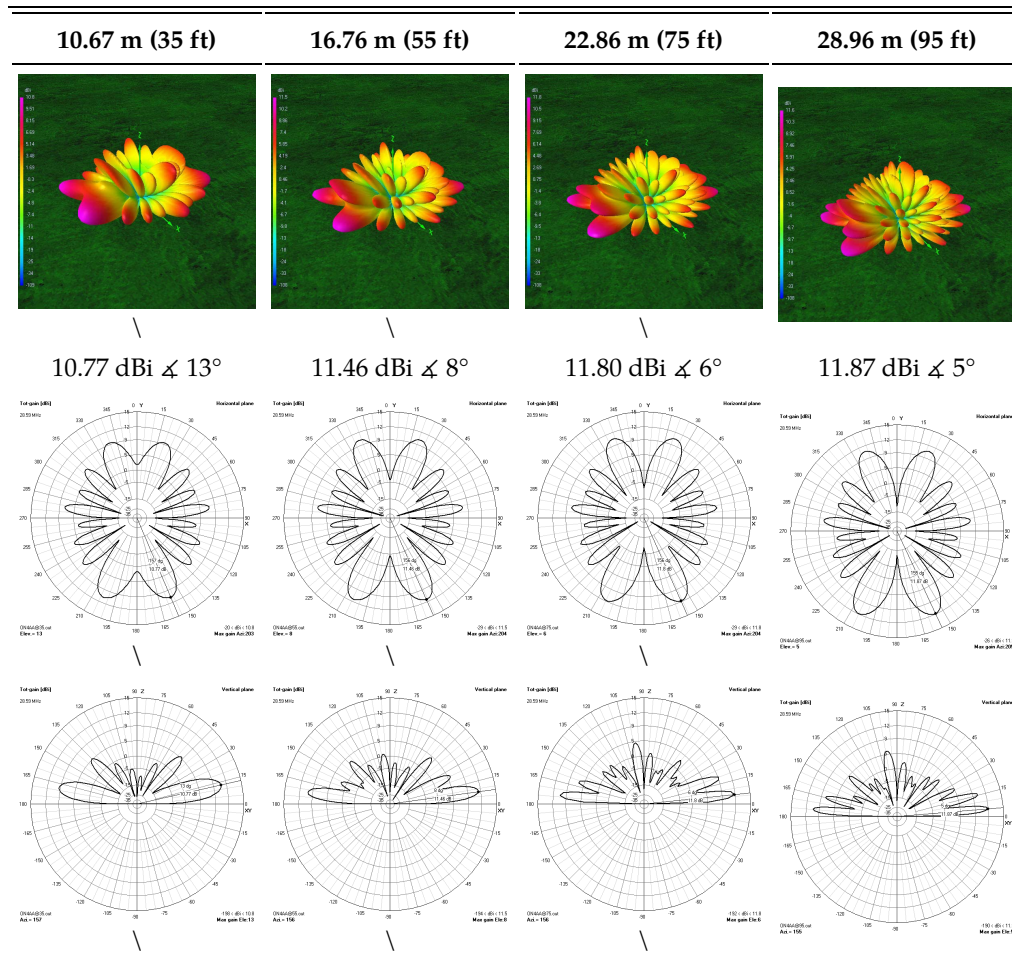

# Height

Focusing on the lower bands, the most interesting radiation patterns are obtained with an antenna height of about 16.76 m (55 ft). With the antenna at this height:

- On 80 m, the pattern combines maximum gain in the zenith for near-vertical incidence skywave (NVIS) short-haul communications with still enough broadside gain at 30° elevation for long-haul DX contacts.
- On 40 m, a take-off angle of 34° is sufficiently low to enable reliable long-distance (DX) contacts in all directions except for two broadside nulls.
- The 30 m-band is actually the main reason for choosing an antenna height of 16.76 m (55 ft). Only at this height, the useless zenithal lobe will be suppressed.

It is also interesting to see how nulls in certain directions on one band are covered by increased gain lobes on the next harmonic band. This holds true for all six bands. So, one may conclude that the antenna offers spatial diversity through its frequency diversity. Careful selection of operating time and frequency, taking into account available propagation modes, will put you in contact with any place on the globe. This is quite a lot for such a simple, yet very effective, broadband trapless antenna!

A final warning: As with any antenna, be very careful about placing it in the vicinity of other resonant metallic structures (especially antennas) since this may severely upset the desired radiation patterns.

## Balun & choke

In theory, the CL-OCFD antenna can be fed with low loss balanced 200 Ω transmission line of any length without any further precautions. Unfortunately, 200 Ω twin line is not commercially available. Moreover, it requires closely spaced wires, which is very hard to construct. If more convenient 50 Ω coax is used as a feed line, the antenna feed point will need to perform three additional tasks:

1. Transform the 50 Ω feed line impedance to 200 Ω. This will keep the SWR on the coaxial line below 3÷1, limiting reflection loss and hence eliminating the need to use an open wire feed line.
2. Convert the unbalanced currents of the coax to balanced currents, as required by this symmetrically fed antenna. Failing to do so, would severely upset the radiation patterns.

3. Prevent both conducted and induced RF currents from flowing back on the outer sheath of the coaxial line towards the shack. Doing so, will eliminate the most common source of radio frequency interference (RFI) occurring with off-center-fed dipole antennas.

## Current balun


Tasks 1 & 2 can be performed by a 4÷1 impedance-transforming balun, preferably of the current-type. Voltage type baluns also work, but will be less effective in forcing the right currents on the antenna when nearby metallic objects couple with the antenna. However, do avoid autotransformers or ununs having a common rail between input and output, but lacking a center tap to earth. Here is [more information about selecting the right current balun](#).

A balun for an OCFD needs to have a high power-rating because it will need to handle the compounded effects of forward power, reflected power and sheath current. The same holds for the sheath current choke. In terms of the power handling capacity as stated on commercial baluns, beware that 1 kW SSB is less than 1 kW CW, is less than 1 kW RTTY, due to the increasing duty cycle of each respective mode. The use of a balun built within a tuner is not recommended because all too often, such baluns happen to be too flimsy. Furthermore, digital modes and FM have duty cycles of up to 100%. This meaning that if you want to operate full legal power in a digital mode, you really would like to have a balun rated at 5 kW CW/SSB.

If you happen to live in the USA, I highly recommend [dual Guanella element model 4115ocf](#) or [hybrid Guanella–Ruthroff model 4116ocf](#) both of *Balun Designs*. I do not recommend using a single Guanella element on dual core, like model 4114ocf.

Whereas, prohibitive import taxes render the [ON7FU Ferrite Applications 4÷1 dual element Guanella balun](#) a more valuable choice of equal quality for EU citizens.

These baluns are devotedly hand-assembled by respectively [Robert J. Rumsey, KZ5R](#) and [Hugo Cnudde, ON7FU](#). I particularly like models with the N-connector option.

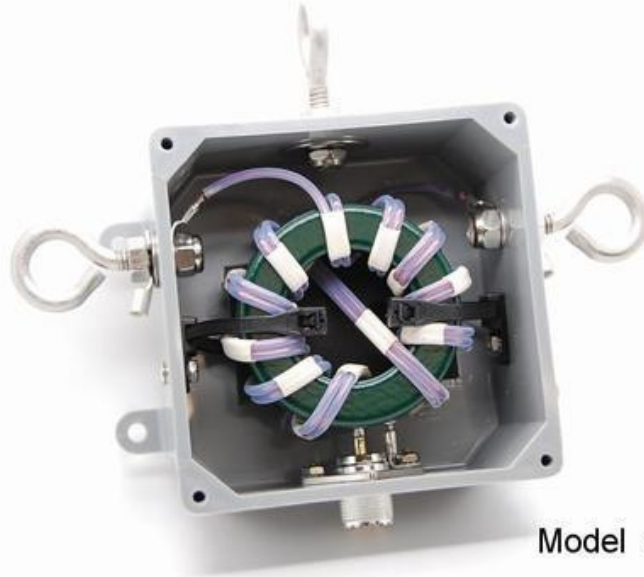

Model 4115ocf



## ON7FU Ferrite Applications



## Sheath current choke

In many practical realisations of off-center-fed antennas, the third feed point task of preventing the flow of RF currents on the outer sheath of the coax is often overlooked. This is how OCF antennas gained an unfair reputation of being provokers of RFI. Although a current balun will effectively prevent conducted RF currents from flowing along the outer sheath of the coax, it may not always be sufficient to prevent the antenna itself from inducing sheath currents on the coax line. Off-center-fed antennas are more prone to this effect because the coax line is positioned asymmetrically with respect to the antenna.



**Figure 26:** A W2DU sheath current choke prior to applying heat shrink.

Induced sheath currents can easily be prevented. Simply place a sheath current choke right behind the balun. Sheath current choke construction instructions are readily available.

Another sheath current choke may be mounted at the grounded coax bulkhead. This sheath current choke is optional. A coax bulkhead is a grounded metal entry plate through which coaxial lines enter the shack. Such a grounded coax bulkhead is also an excellent lightning protection. It may act as a diversion of last resort for any high currents on the outer sheath of the coax.

Because of their only moderately high sheath impedance, sheath current chokes are only effective when placed at locations where sheath currents require a relatively low impedance to flow. A sheath current choke at any of these locations will introduce, with its lossy magnetic material, a new boundary condition, preventing sheath currents to exist.

# Center load components

## Capacitor



door-knob capacitor

The table below lists, for an input power of 2500 W, the voltage over the center-loading capacitor at the different operating frequencies.

For the six-band design (220 pF), the highest voltage is 1310 V and is present when the antenna is operated at 10.125 MHz. If the power were only 150 W, the maximum voltage over the 220 pF capacitor would still measure 321 V.

At 5 W this would be 59 V. A doorknob capacitor with a voltage rating of at least 2 kV can safely be employed in the six-band design operated at the 2.5 kW power level.

**Table 12: Voltage over center-loading capacitors with 2.5 kW input power**

f (MHz)	U <sub>220 pF</sub>	U <sub>478 pF</sub>
3.647	464 V	?
7.099	62 V	?
<b>10.125</b>	<b>1310 V</b>	—
14.174	209 V	?
21.224	403 V	?
28.594	652 V	?

Many European surplus doorknob capacitors are Russian made. Picofarad in the Cyrillic alphabet is denoted as пФ. The Cyrillic letter п may appear to Westerners as a Latin n of nano, but in reality it is a Cyrillic “pe” of pico. Kilovolt in Cyrillic is written as κВ. There are more types of high-voltage capacitors; [read about them here](#).

Some have also successfully employed a bank of parallel high-voltage SMD capacitors as a capacitive center load. However, replacing the discrete capacitor with an open stub line would be ill-advised. An open stub line may have the exact same capacitance at its design frequency; on other frequencies it will behave completely differently, upsetting the desired resonances of the antenna.





**Figure 27:** A doorknob capacitor with its snubber resistor installed inside a protective inverted egg cup. The egg cup is made of a durable, weather-resistant plastic. The whole is attached to an antenna insulator.



**Figure 28:** Layout for mounting a doorknob capacitor with its snubber resistor to an antenna insulator. All hardware is A2 stainless steel with an M5 thread.

## Snubber resistor

The center-load capacitor  $C$  needs to be protected against breakdown from static charges. A **10 kV 1 W thick film metal oxide resistor  $R$  of about 1 to 10 M $\Omega$**  will bleed off any static electricity without incurring any significant loss. Such a protective resistor is also called a **snubber**.

## Inductor

An inductor of 4.95  $\mu\text{H}$  can take on many sizes and shapes. However, the loss and hence quality factor of an inductor will to a certain extent be dependent on its form factor and conductor size. Coils with a form factor that would fit inside a cube often yield the highest quality factor for a given conductor size. Eventually, many designs are a compromise between size, weight and Q factor.

Since I was not satisfied with the accuracy and formulas on which most inductance calculators are based, I designed my own [inductance calculator](#), especially for this project. However, feel free to employ it also for any of your other projects.

Here is a design suggestion for the 4.95  $\mu\text{H}$  center-loading inductor of the six-band CL-OCFD:

According to my [inductance calculator](#), an air coil of length  $\ell = 150$  mm with a mean diameter  $D = 150$  mm and  $N = 6.75$  turns of diameter  $1/4$  " ( $d = 6.35$  mm) copper brake pipe will yield an inductance of 4.98  $\mu\text{H}$  at 10.125 MHz; close enough for this application. With these dimensions the unloaded quality factor  $Q_{L,u1}$  will be a staggering 2220!

The self-resonant frequency of this coil is 31.633 MHz. This is well away from the highest used odd harmonic, 10.125 MHz in this case. (Remember, even harmonics are not influenced by the center-load!)

As for the coil's construction technique, I prefer [AD5X's plumbing recipe](#).


## Insulators & rope

### Insulators

Hams tend to forget about the high RF potentials that are present at the ends of any dipole antenna. Cheap, poor, dirty or broken insulators may form through humid hang ropes an additional path to earth, or at least lower the resonant frequencies. The resistance of such a path may be of the order of mega-ohms. Nevertheless, due to the equally high end-potentials these hidden losses can become quite considerable!



## Rope, knots, pulley & weight

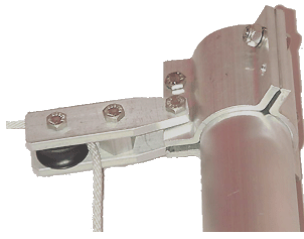

pulley

Horizontal wire antennas are often hung from ropes on both ends. Due to gravitation, flexible wires will hang in the shape of a catenary which corresponds to the graph of a hyperbolic cosine;  $\cosh(x)$ . Considerable tensile forces are required to straighten up the wire a bit. On a stormy day, the wind force may put extra strain on the wire, eventually causing it to snap.

A pulley with weight system at one end of the antenna will prevent this from happening. A pulley system will also greatly simplify the trimming of your antenna for resonance as well as general antenna maintenance. [Click here](#) for:

- More information on rope types for outdoor use,
- Saving money on stainless steel clamps by knowing some useful knots.

## Trimming

### How long does the antenna wire need to be?



cable cutter

Above question often returns in many antenna news-groups. Well, my antenna is actually 40.66 m long, because it is made of **4 mm<sup>2</sup> gauge PVC-insulated wire** and hanging at a height of 16.75 m above a city lot ( $\sigma = 1 \text{ mS/m}$ ;  $\epsilon_r = 5$ ). There is a good chance **your antenna will end up measuring a different length.** It will most probably be hanging at a different height and could be made of another (bare?) wire gauge. Moreover, your location will have different ground characteristics. Look here for a **ground-conductivity map** of your area. As a result of these influencing factors, your CL-OCFD antenna will probably need to be slightly longer or shorter.

Trimming a wire antenna may seem daunting at first, but as a matter of fact it is absolutely necessary! **Any HF antenna —except for a log-periodic— requires element length trimming to compensate for its height above ground.** Do not be led fooled by other antenna designs not mentioning this. The need may be less stringent with thick tubing elements, but there are examples abound where it does pay off to even trim very thick elements.<sup>9</sup>

## At what frequency should the antenna wire resonate?

That is a far better question. Here is an universal answer:

The electrical length of the CL-OCFD, at its definitive location and height, should be such that its fundamental resonant frequency is exactly 3.440 MHz. (See the [section about resonant lengths](#)). This resonance is measured at the center of the antenna without the center-loading inserted.

Note that this trimming requirement is not exclusively reserved for this antenna. [All horizontal HF wire antennas require trimming](#) to adjust to the surroundings. Most manufacturers prefer not to mention this.

The resonance of the antenna wire needs to be checked [with the antenna wire at its definitive height and location](#). The antenna will need to be [temporarily fed at its center with the same sheath current choke](#). This is the very same sheath current choke which will be used later on at a different position along the antenna.

There remains one problem though: How to determine the fundamental resonance of a dipole at 3.440 MHz when it is hanging at a great height above the ground?

At its fundamental resonance, the antenna will have a radiation resistance of  $73 \Omega$ . This value coincides with the input impedance when the antenna is temporarily fed at the center. However, when feeding over a test coax of differing characteristic impedance, [one will not see resonance even though the antenna is resonating!](#) The happens because the mismatch will add some reactance. See for yourself with [AC6LA's transmission line calculator](#). Lowering the dipole is neither an option as this will lower its resonant frequency. Here is how to overcome this dilemma...

## Using a vector network analyser

Beware! There are little black boxes on the market, pretending to be VNAs. However, many of these little boxes do not offer the possibility to calibrate with a  $50\ \Omega$  load, a short and an open. **If it does not calibrate, is not a vector network analyser!** Do not spend any money on this.

A brief guide about [using a noise bridge or SWR analyser](#) is available for those not having a VNA at their disposal.

### Using a VNA with Bluetooth connectivity

The mini Radio Solutions miniVNA PRO is an affordable vector network analyser (VNA) offering remote wireless operation over Bluetooth. This allows for measuring HF antennas installed at height without having to deal with coax cable lengths, baluns nor common mode suppression chokes. In case of the CL-OCFD, this VNA is able to determine its fundamental resonant frequency at the center, as well as the center load reactance required for resonance on 3.647 and 10.125 MHz. A separate article details how to [modify the miniVNA PRO to render it truly field proof](#).



**Figure 29:** A modified miniVNA PRO hanging from the center of a HF dipole at about 15 m (50 ft) above ground. A balun is not required for taking accurate measurements. The VNA can be read from the comfort of my home even though there are quite some 2,4 GHz WLAN signals present in this urban environment. Two 3350 mAh Panasonic NCR18650B Li-ion cells in parallel provide more than enough «juice» for a whole day of measurements.

## Using a VNA with a random length coax line

All what needs to be done, is preparing an open (i.e. nothing), a short and a 50  $\Omega$  resistive load that can connect to the terminals of the sheath current choke at the end of the random length coax line. If your choke has wire terminals, the 50  $\Omega$  calibration load may be constructed out of two high-precision low-inductive 100  $\Omega$  resistors. Connect the sheath current choke to a long coax cable and connect the arrangement to the VNA. Hit the calibration button and you are ready to start trimming the antenna at its definitive height.

## Trimming procedure

There are two ways of trimming the antenna. The first method was suggested to me by [Bob Rose, KC1DSQ](#). This trimming method requires the antenna wire to be intact at its center. By contrast, the alternative trimming method starts off with the dipole cut at the middle.

## Trimming for 7.099 MHz resonance at the 20% feed location

1. Start with a slightly too long stretch of antenna wire; say 42 m long.
2. Cut the wire at 20%; its intended feed point location.
3. Leave the 50% center of the antenna intact.
4. Connect a VNA calibrated at 200  $\Omega$  at that feed point.

5. Trim the antenna for the lowest return loss (SWR) at 7.099 MHz and the other even harmonics; i.e. 14.174 MHz, 21.224 MHz and 28.594 MHz. For each amount of length trimmed off the short end, trim four times that length off the long end.
6. Once finished trimming, temporarily reconnect the short and long end.
7. Only now, cut the antenna at its 50% center.
8. Connect the VNA now at this center location to determine the required reactances for resonance at 3.647 MHz and 10.125 MHz.

The advantage of this approach is that it does not rely on any modelling results (i.e. the 3.44 MHz). All measurements are taken at the frequencies of interest.

### Trimming for 3.44 MHz resonance at the center

1. Start off with an **antenna wire** with a length of 42 m. During this process, stick to the rule: «Better having a wire that is too long, than one that is too short!»
2. Prepare, as described in the previous section, a half-wave length of test coax (or multiple thereof), **resonant at 3.440 MHz**. Connect this test coax to the sheath current choke. Alternatively, connect an arbitrary length of test coax to the sheath current choke and calibrate this arrangement with a VNA.
3. **Cut the antenna wire in the middle**. The following may sound too obvious; but for those who do not know: the middle of a long wire is found by folding it in two.
4. Connect the test coax with the sheath current choke **at the center of the antenna**.
5. **Do not connect the center load nor the balun!**
6. Hang the antenna **at its definitive height and location**. Measure the impedance at 3.440 MHz. It should have a positive (i.e. inductive) reactance. This means the antenna is too long for resonance at this frequency. Now, try to find this first lower frequency where the antenna resonates. It should be somewhere below 3.4 MHz. This will give you a feel of what we are looking for at 3.440 MHz. Write down this lower resonant frequency.
7. Lower the antenna. —This is why it is handy to have a pulley installed.— Trim off an equal amount of both antenna legs. Use this **trimming chart**. If you have only one pulley, you may trim the antenna also at its center. **Keep note on paper** of how much you have been cutting off so far. At this point, the clever wannabes amongst you, would say they can predict how much wire needs to be trimmed off in total. Don't be fooled in cutting off too much! It is not a linear process, so take it step by step.

8. Repeat steps 6 and 7 until you find resonance (reactive part  $X = 0$ ) at 3.440 MHz. Normally, you should also be able to measure the 7<sup>th</sup> resonance in the vicinity of 24.912 MHz.
9. With the antenna still hanging in the air, measure the reactance at 3.647 MHz and 10.125 MHz. Check if they are more or less equal but opposite in sign of the values listed for  $X_{CL}$  at these frequencies. If not, you may want to adapt the values of C and L to your specific case. This only applies to users of VNAs and well-designed noise bridges. Measurements made with SWR analysers are not reliable.
10. Now, you may lower the antenna a final time. Remove the sheath current choke from the center.
11. Measure 28.9% of the total(!) antenna length and cut the antenna at this point. Take great care in measuring this length accurately, because the VSWR-performance of this antenna is quite sensitive to its relative feed point location. Insert the 4÷1 current balun immediately followed by the sheath current choke at this position.
12. Connect the center-loading network at the center of the antenna.
13. Raise the antenna, warm up your tube amplifier, tune a little and have fun!

## Summary

VSWR performance of ordinary off-center-fed dipoles is always a trade-off between either excellent broad-band performance on 80 m combined with mediocre VSWR on the higher amateur HF bands or vice versa. This problem is due to the fact that the higher amateur HF bands are not true harmonics of the 80 m band.

To overcome this problem, the novel concept of center-loading an off-center-fed dipole (CL-OCFD) is introduced. Center-loading offers independent control over a dipole's fundamental resonant frequency and odd harmonics, whilst off-center feeding ensures low-VSWR coverage of the entire 80 m-band.

Two practical CL-OCFD designs with useful radiation patterns are presented. A five-band design (80, 40, 20, 15 & 10 m) employs a capacitive center-load of 470 pF, whereas a six-band design adds 30 m-band coverage by replacing the center-load by an 4.95  $\mu$ H inductor in series with a 220 pF capacitor. These designs are not scalable to other bands.

# Publications

The center-loaded off-center-fed dipole is the original invention and work of Serge Stroobandt, ON4AA. After its initial publication on the *Internet* in 2007, the CL-OCFD was subsequently described in the following publications:

Ed Spingola, VA3TPV. Multiband HF antennas, part 3, Windom and OCF dipole. *The Communicator*. Mississauga; 2010;13(4):9-11. Available at: [https://web.archive.org/web/20170518222728/http://www.marc.on.ca/Files/NewsLetters/MARC\\_NL\\_2010\\_04.pdf](https://web.archive.org/web/20170518222728/http://www.marc.on.ca/Files/NewsLetters/MARC_NL_2010_04.pdf).

Alois Krischke, DJ0TR, Karl Rothammelt, *Antennenbuch*. 13th ed.. DARC Verlag GmbH, Baunatal; 2013:301-304. Available at: <http://www.antennenbuch.de/>.

A year after the online publication of my article, a description of a very similar CL-OCFD for 80 and 160 m was published, equally claiming full 80 m band coverage. There is no reference to my work. It appears to be completely independent work. The antenna is actually a 3-band CL-OCFD antenna (160, 80 & 75 m) where the center loading moves the natural third harmonic to the lower end of the 80 m band, below the 75 m second harmonic.

Gene Preston, K5GP, A broadband 80/160 meter dipole. Available at: [https://www.egpreston.com/K5GP\\_broadband\\_80\\_meter\\_antenna.pdf](https://www.egpreston.com/K5GP_broadband_80_meter_antenna.pdf)

# References

1. John Belrose, VE2CV, Peter Bouliane, VE3KLO. The off-center-fed dipole revisited: A broadband, multiband antenna. *QST*. 1990;74(8):28-34. <https://www.arrl.org/files/file/protected/Group/Members/Technology/tis/info/pdf/9008028.pdf>
2. Frank Witt, AI1H. How to design off-center-fed multiband wire antenna using that invisible transformer in the sky. In: *Antenna Compendium Volume 3*. The American Radio Relay League; 1992:66-75. <https://www.arrl.org/shop/Antenna-Compendium-Volume-3/>
3. Gene Preston, K5GP. A broadband 80/160 meter dipole. Published 2008. [https://www.egpreston.com/K5GP\\_broadband\\_80\\_meter\\_antenna.pdf](https://www.egpreston.com/K5GP_broadband_80_meter_antenna.pdf)
4. Karl Rothammel, Y21BK. *Antennenbuch*. 10th ed. (Alois Krischke, DJ0TR, ed.). Franckh-Kosmos Verlags-GmbH & Co., Stuttgart; 1991:159-162. <http://www.antennenbuch.de/>



5. Fritz Spillner, DJ2KY. Die FD4-Windom-Antenne. *QRV Amateur-Radio*. 1971;25:13-20. <https://www.addx.de/textarchiv/archiv-qrv.php>
6. Thomas Fichtlscherer. *Antennas for Shortwave*. Hofi HF-Technik GmbH & Co.KG, Mönchsroth; 2004. <https://www.hofi.de/pdf/de/DrahtAntennen.pdf>
7. Gian Moda, I7SWX. Technical topics. *RadCom*. 1988;64(3). <https://rsgb.org/main/publications-archives/radcom/>
8. Gian Moda, I7SWX. A coaxial-fed multiband 'Windom' antenna. In: Erwin David, G4LQI, ed. *HF Antenna Collection*. 1st ed. Radio Society of Great Britain; 1991:9. [https://www.rsgbshop.org/acatalog/Online\\_Catalogue\\_Antennas\\_37.html](https://www.rsgbshop.org/acatalog/Online_Catalogue_Antennas_37.html)
9. John Devoldere, ON4UN. *ON4UN's Low Band DXing: Antennas, Equipment and Techniques for DXcitement on 160, 80 and 40 Meters*. 5th ed. American Radio Relay League; 2010. <https://www.arrl.org/shop/ON4UN-s-Low-Band-DXing/>



This work is licensed under a [Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License](https://creativecommons.org/licenses/by-nc-sa/4.0/).

Other licensing available on request.

Unattended [CSS](https://www.casstyping.com/) typesetting with .

This work is published at <https://hamwaves.com/cl-ocfd/en/>.

Last update: Monday, March 1, 2021.